VAXcluster Console System

Installation Guide

EK-VXCNE-IN-005

June 1990

This guide describes how to install the VAXcluster Console System software and the fiberoptic and DECconnect hardware.

Revision/Update Information:	This manual is a revision of the *VAXcluster Console System Hardware Installation Guide*, order number EK-VXCND-IN-004.
Operating System and Version:	VMS Version 5.3
Software Version:	VCS Version 1.3

digital equipment corporation
maynard, massachusetts

First Printing, May 1986
Revised, July 1986
Revised, May 1987
Updated, January 1988
Revised, October 1988
Revised, June 1990

The information in this document is subject to change without notice and should not be construed as a commitment by Digital Equipment Corporation.

Digital Equipment Corporation assumes no responsibility for any errors that may appear in this document.

Any software described in this document is furnished under a license and may be used or copied only in accordance with the terms of such license. No responsibility is assumed for the use or reliability of software or equipment that is not supplied by Digital Equipment Corporation or its affiliated companies.

Restricted Rights: Use, duplication, or disclosure by the U.S. Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013.

© Digital Equipment Corporation 1986, 1987, 1988, 1990.

All rights reserved.
Printed in U.S.A.

The postpaid Reader's Comments forms at the end of this document request your critical evaluation to assist in preparing future documentation.

The following are trademarks of Digital Equipment Corporation: DEC, DECconnect, DECnet, DECserver, DELNI, HSC, LAT, microVAX, microVAX II, PDP, VAX, VAXcluster, VMS, and the DIGITAL logo.

This document was prepared with VAX DOCUMENT, Version 1.2.

Contents

About This Guide vii

1 Hardware Installation

1.1 VCS Hardware Connection Methods and Precautions 1–1
1.1.1 VCS Hardware Direct Connection 1–1
1.1.2 VCS Hardware Host Initiated Connection 1–3
1.1.3 VCS Hardware Installation Precautions 1–5
1.1.3.1 VAX 8830/8840 Precautions 1–5
1.1.3.2 HSC Precautions 1–6
1.2 VCS Fiberoptic Components 1–7
1.2.1 Fiberoptic Cable Characteristics 1–7
1.2.2 Fiberoptic Cable Environmental Requirements 1–8
1.2.3 Preparing the Host System 1–8
1.2.4 Direct Connection Installation 1–12
1.2.5 Host Initiated Connection Installation 1–17
1.2.6 Fiberoptic Installation at the Serviced Nodes 1–19
1.2.6.1 Optional Extension Cable Installation 1–21
1.2.6.2 Optional DECconnect Cabling Installation 1–23
1.2.6.3 Optional VCS Disable Switch Installation 1–24
1.2.7 Fiberoptic Converter Troubleshooting 1–25
1.3 VCS DECconnect Components 1–26
1.3.1 Preparing the Host System 1–27
1.3.2 Direct Connection Installation 1–30
1.3.3 Host Initiated Connection Installation 1–32
1.3.4 DECconnect Installation at the Serviced Nodes 1–33
1.3.5 DECconnect Adapter Troubleshooting 1–34

2 Software Installation

2.1 VCS Software Kit Inventory 2–1
2.2 VCS Host System Preparation 2–1
2.2.1 Required Software 2–2
2.2.2 Required Disk Space 2–2
2.2.3 User Terminals 2–2
2.2.4 SYSGEN Parameters 2–3
2.2.5 Host Initiated Connection Setup 2–3
2.2.5.1 Setting Up DECserver 200 Ports 2–4
2.2.5.2 Using VCS$LTA.COM to Create LTA Devices 2–6
2.3 Installation Preparation for the VAX 8500/8700/8800 Series Systems 2–7
2.3.1 VAX 8500/8700/8800 2–8
2.3.2 VAX 8830/8840 2–10
2.3.3 Preparation Work Sheets 2–11
2.4 Installation of the VCS Software on the Host System 2–13
2.4.1 License Registration 2–13
2.4.2 Installation Procedure 2–14
2.4.3 VCS Installation Log 2–21
2.5 Site-Specific Modifications to the Installed VCS Environment 2–23
2.5.1 Creating a Configuration File 2–23
2.5.2 Console Line Communications Characteristics 2–23
2.5.3 VCS Logical Names 2–24
2.5.3.1 Node Name Grouping by Logical Name 2–24
2.5.3.2 VCS Logical Name Definitions 2–25
2.5.4 Setting Console Terminal Characteristics 2–28
2.5.5 Starting the VCS Software at System Reboot 2–28
2.5.5.1 VCS$STARTUP.COM 2–29
2.5.5.2 VCS Startup Sequence 2–31
2.5.6 Stopping the VCS Software at System Shutdown 2–32
2.6 Starting the VCS Software 2–32
2.7 Final Setup 2–33
2.7.1 VAX 8500/8700/8800 2–33
2.7.2 VAX 8830/8840 2–34

Index

Figures

1–1	VCS Direct Connection Method	1–2
1–2	VCS Host Initiated Connection with DELNI	1–3
1–3	Host Initiated Connection with H4000	1–4
1–4	VAXconsole Central Terminal Line	1–6
1–5	Fiberoptic Cable Structure	1–8
1–6	BA23 Device Connectors	1–9
1–7	BA123 Device Connectors	1–10
1–8	BA213 Device Connectors	1–11
1–9	H7133 16-Tap Power Supply Connections	1–12
1–10	AC Power Plug Types	1–13
1–11	BA23/BA123 Enclosure Bulkhead Connection	1–14
1–12	BA213 Enclosure Bulkhead Connection	1–15
1–13	H7133 16-Tap Power Supply Connections	1–16
1–14	DECserver 200 Terminal Server	1–17
1–15	DECserver 200 Connections	1–18
1–16	H7132 Single-Tap Power Supply Connections	1–19
1–17	Fiberoptic Connector Jacks	1–20
1–18	Console Extension Cable Connection	1–21
1–19	VAXconsole PRO380 COMM 1 Port	1–22
1–20	Optional DECconnect Cabling	1–23
1–21	VCS Disable Switch Cabling	1–24
1–22	DECconnect Cable and Adapters	1–26
1–23	BA23 Device Connectors	1–27
1–24	BA123 Device Connectors	1–28
1–25	BA213 Device Connectors	1–29
1–26	BA23/BA123 Enclosure Bulkhead Connection	1–30
1–27	BA213 Enclosure Bulkhead Connection	1–31
1–28	DECconnect Adapter and Cable Connections	1–31
1–29	DECserver 200 Terminal Server	1–32
1–30	DECserver 200 Connections	1–33
1–31	DECconnect Adapter and Cable Connections	1–34
2–1	DECserver 200 Back Panel	2–4
2–2	VAXconsole PRO380 Communication Line Setup Menu	2–9
2–3	Work Sheet, Nodes 1 to 16	2–11
2–4	Work Sheet, Nodes 17 to 32	2–12

Tables

2–1 Logical Names 2–25

About This Guide

The VAXcluster Console System allows multiple system management from one location. The VCS software runs on most VMS V5.3 systems. See the VCS Software Product Description (SPD) for a specific description of host systems. Specific installation procedures for the host processors can be found in their respective installation documentation.

Intended Audience

This guide is intended for Digital Customer Service.

Structure of This Document

Chapter 1, Hardware Installation, provides installation procedures for the fiberoptic and DECconnect hardware components between the VCS host and serviced systems.

Chapter 2, Software Installation, provides the VCS software installation procedures for the host system and a work sheet for recording information about the serviced configuration.

Conventions

The *VAXcluster Console System Installation Guide* uses the following conventions:

Convention	Meaning
Italic	Words or phrases appearing in italics indicate one of the following: ■ Referencing of an associated document ■ Emphasis on an important word or concept ■ A variable Italic text is also used to indicate titles of manuals.
Blue-green ink **Bold**	Blue-green ink indicates information that you must enter from the keyboard or a screen object that you must choose. For online versions, user input is shown in **bold**.
UPPERCASE TEXT	Text in uppercase should be typed exactly as shown.
lowercase text	Text in lowercase is an item supplied by you, such as a file name or a node name.
[ ]	In format descriptions, brackets ([ ]) enclose an optional item.
{ }	In format descriptions, braces ({ }) indicate that you must choose one item from the enclosed list.
, . . .	A comma followed by a horizontal ellipsis indicates that you can supply more than one item separated by commas.
Return	In procedures, a key name is shown enclosed to indicate that you press a key on the keyboard.
Ctrl/x	In procedures, a sequence such as Ctrl/x indicates that you must hold down the key labeled Ctrl while you press another key or a pointing device button.

Associated Documents

The following documents are either referred to in this manual or contain additional information pertaining to VCS:

DECserver 200 Hardware Installation/Owner's Guide
DECconnect System Planning and Configuration Guide
DELNI Ethernet Local Network Interconnect Technical Manual
H4000 Ethernet Installation Guide
Guide to Terminal Server Manager
Guide to Setting Up a VMS System
Guide to VMS System Security
Introduction to VMS System Management
Introduction to VMS System Routines
VAX 8800/8700/8550/8500 Console User's Guide
VAX 8840/8830 Console User's Guide
VAXcluster Console System Software Reference Manual
VMS DCL Concepts Manual
VMS License Management Utility Manual
VMS System Manager's Manual

Revision History

This guide contains both hardware and software installation instructions. Previous versions of this guide were devoted exclusively to the hardware that supports VCS. The software installation information now in Chapter 2 was previously contained in the *VAXcluster Console System Software Manual.*

1

Hardware Installation

This chapter describes how to prepare and install fiberoptic and DECconnect interconnection kits between the VAXcluster Console System (VCS) host and serviced systems.

Section 1.1 describes the direct connection and host initiated connection methods that can be used in the VCS hardware installation procedures. Also, described are precautionary guidelines to follow when the installation is performed on a VAX 8830/8840 system or a system that contains HSC devices.

Section 1.2 describes how to install fiberoptic components on a serviced system.

Section 1.3 describes how to install DECconnect components on a serviced system.

1.1 VCS Hardware Connection Methods and Precautions

The VCS hardware can be connected by the following:

- The direct connection method described in Section 1.1.1
- The host initiated connection method described in Section 1.1.2

1.1.1 VCS Hardware Direct Connection

A VCS hardware direct connection consists of a host MicroVAX or VAXstation processor, up to 32 nodes serviced by the VCS software, and a fiberoptic (FOC) or DECconnect connection between the VCS host system and each serviced node. An example of a direct connection method is shown in Figure 1–1.

Figure 1–1 VCS Direct Connection Method

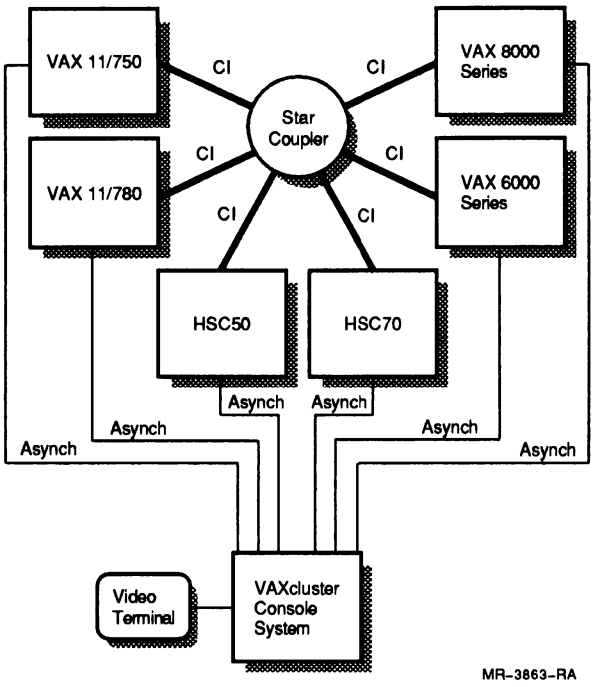

1.1.2 VCS Hardware Host Initiated Connection

A VCS hardware host initiated connection consists of a VCS host system connected to an Ethernet network and serviced nodes that are connected by asynchronous fiberoptic or DECconnect hardware to a DECserver 200 terminal server.

An example of a VCS host initiated hardware connection is shown in Figure 1–2. The VCS host is connected to an Ethernet network by a DELNI communications device. Figure 1–2 also shows four direct connections.

Figure 1–2 VCS Host Initiated Connection with DELNI

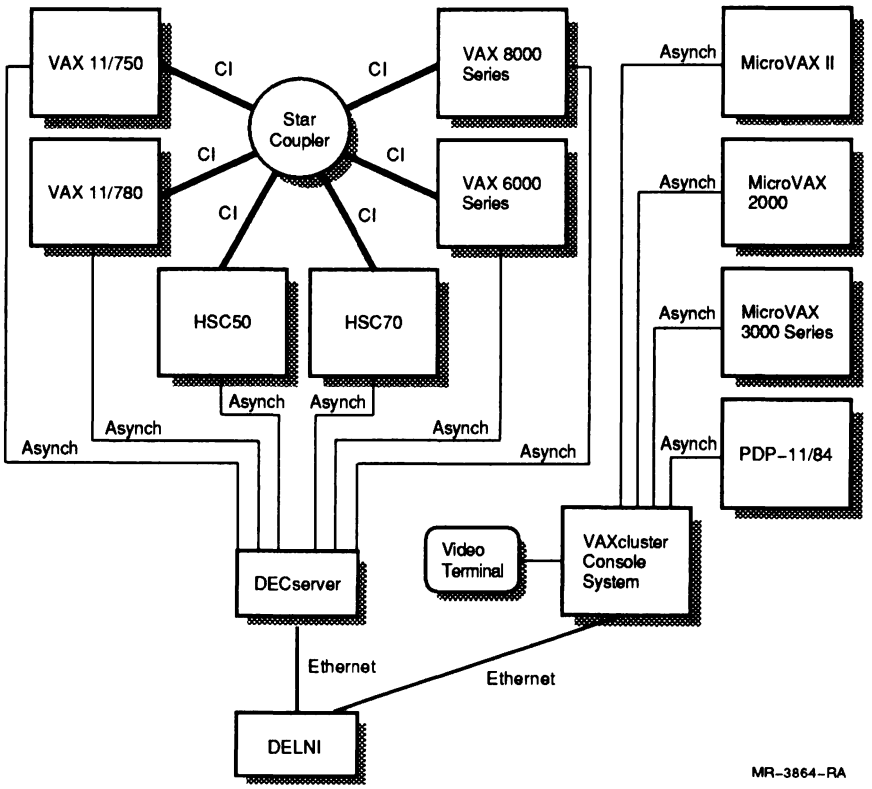

Figure 1–3 shows another example of a VCS host initiated connection. The VCS host is connected to an H4000 Ethernet transceiver. Figure 1–3 also shows four direct connections.

Figure 1–3 Host Initiated Connection with H4000

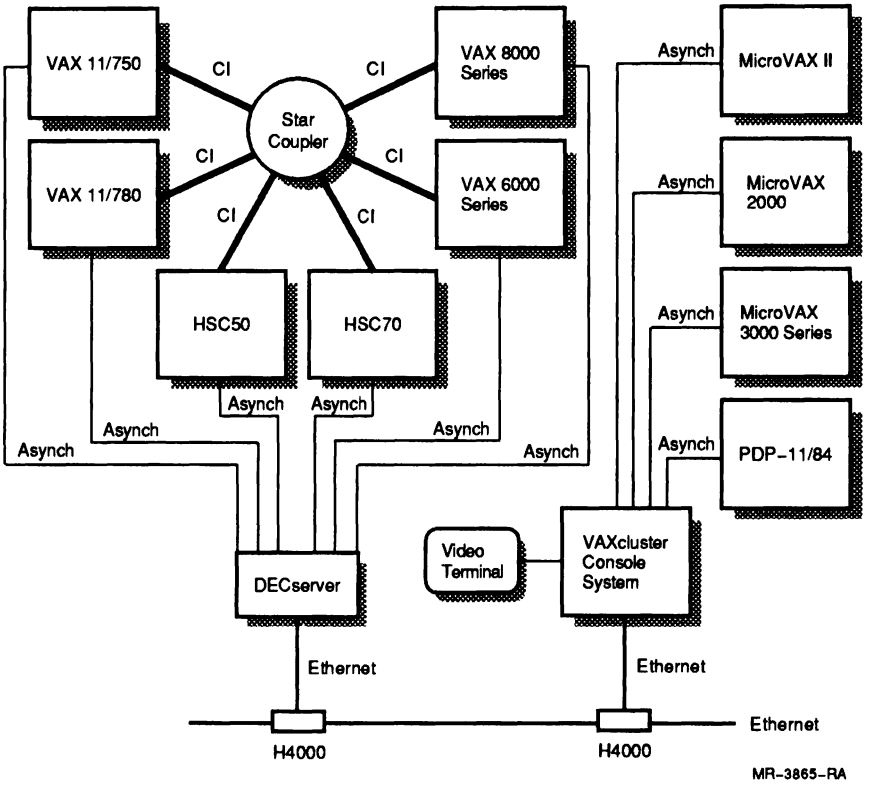

1.1.3 VCS Hardware Installation Precautions

Read Section 1.1.3.1 if the serviced system is a VAX 8830/8840 system. Read Section 1.1.3.2 if the serviced system contains HSC devices.

1.1.3.1 VAX 8830/8840 Precautions Connect the VCS host to a VAX 8830/8840 system by the **central terminal line** of a VAXconsole MicroVAX II. The central terminal line is the 25-pin TTA2: port located on the back of the VAXconsole pedestal system box. See Figure 1–4. For more information about the VAXconsole central terminal line, refer to the *VAX 8840/8830 Console User's Guide*.

WARNING ***It is unsafe to connect VCS directly to the 9-pin OPA0: local console port of the VAXconsole MicroVAX II.*** *Do not use the DECconnect components in the VCS fiberoptic kit for this purpose.*

Connect the VCS host system to the VAXconsole 25-pin TTA2: port instead.

The following VAXconsole command may only be entered at the OPA0: local console port.

PS-HW-0> POWER { INITIALIZE | OFF | ON | STANDBY | STATUS }

If the VCS is connected to the OPA0: local console port, the **POWER** command could accidentally be entered through a remote VCS user interface while an engineer is working on the VAX 8830/8840 system.

Figure 1–4 VAXconsole Central Terminal Line

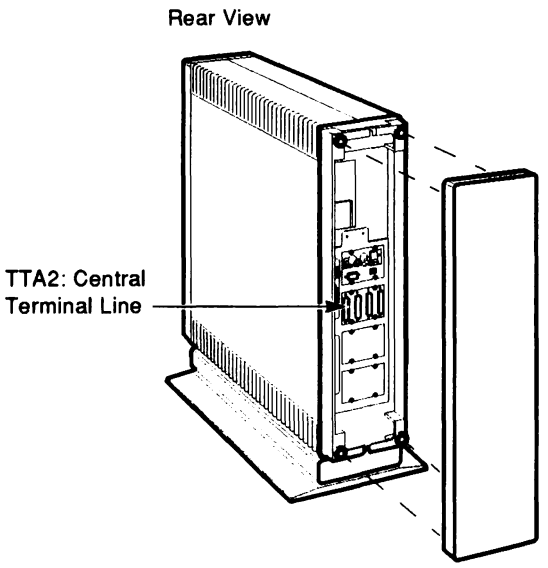

1.1.3.2 HSC Precautions Powering off the VCS host system or the DECserver causes line disruption similar to the line disruption caused by powering off a console terminal. These disruptions are random electrical signals resembling break signals generated on terminal lines.

The inside panel of an HSC cabinet contains a switch with two positions, SECURE and ENABLE. Set this switch to the SECURE position, if currently set to the ENABLE position.

CAUTION *Powering off the VCS host system before ensuring that the SECURE/ENABLE switch on each HSC cabinet has been set correctly causes HSCs with incorrect switch settings to cease normal processing.*

1.2 VCS Fiberoptic Components

The VCS fiberoptic hardware consists of fiberoptic cable, fiberoptic converters, and power supplies for the fiberoptic converters. Each end of the cable needs a converter and a ±12V DC power source.

The following fiberoptic components are used for VCS:

- Fiberoptic cable (BN25J-XX)
- Fiberoptic converter kit (FOCHA-AE/IF), which contains the following components:

Note *Whether or not all the kit components are to be used depends on the kind of VCS-serviced system present.*

  - 2 fiberoptic converters (FOCFB-BB)
  - 1 H7132 single-tap linear power supply
  - 1 VCS disable switch (17-01314-01)
  - 1 RS232 extension cable (BC14N)
  - 1 9-pin female adapter (H8571-B)
  - 1 25-pin male adapter (H8571-C)
  - 1 2-foot DECconnect cable (BC16E-02)
- H7133 16-tap switching power supply

The H7132 single-tap power supply is used to power the fiberoptic converter at the serviced node.

The H7133 16-tap power supply is used to power the fiberoptic converters at the VCS host in a direct connection installation or, at a terminal server (in a host initiated connection installation). One H7133 power supply can provide power to a maximum of 16 fiberoptic converters. One H7133 power supply can provide power to the fiberoptics connected to two DECserver 200 terminal servers if the servers are within eight feet of each other.

1.2.1 Fiberoptic Cable Characteristics

Fiberoptic cable connects a transmitter at one end and a receiver at the other end. The cable has two thin optical fibers (one to transmit and one to receive) that provide simultaneous bidirectional communication.

Each fiberoptic core is reinforced with cladding and enclosed in an inner jacket. The two inner jackets are sealed in a light polyurethane outer jacket.

Installing fiberoptic cables is different from installing traditional cables. Be careful not to break the fiberoptic core, but in many cases, normal cable installation techniques are adequate. Figure 1–5 shows basic fiberoptic cable structure.

Figure 1–5 Fiberoptic Cable Structure

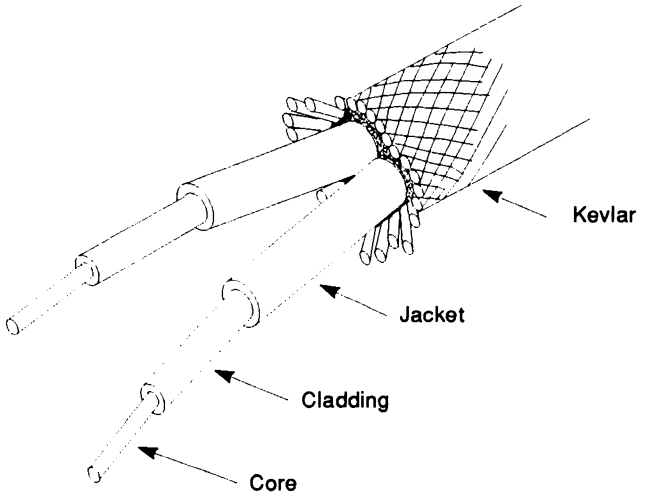

1.2.2 Fiberoptic Cable Environmental Requirements

Fiberoptic cables are made to last longer than coaxial cables. They also require different maintenance. Within reasonable limits, fiberoptic cables are immune from the deteriorating effects of condensation, humidity, and temperature extremes. Fiberoptic cable can withstand a crushing force of 400 lb/in.

Basic fiberoptic cable requirements are as follows.

- Fiberoptic cable must not be kinked or crimped.
- Maintain operating temperature within +50°F to +160°F +10°C to +70°C).

1.2.3 Preparing the Host System

To unpack and install the MicroVAX or VAXstation to be the VCS host system, follow the accompanying installation and configuration documentation. Include all add-on options such as the DHQ11, DZQ11, or CXY08 serial line interface devices.

BA23, BA123, and BA213types of system enclosures are suitable for a VCS direct connection method of installation. Figure 1–6 shows the BA23 type of system enclosure and where to gain access to the device connectors, to which the fiberoptic converters are installed.

Figure 1–6 BA23 Device Connectors

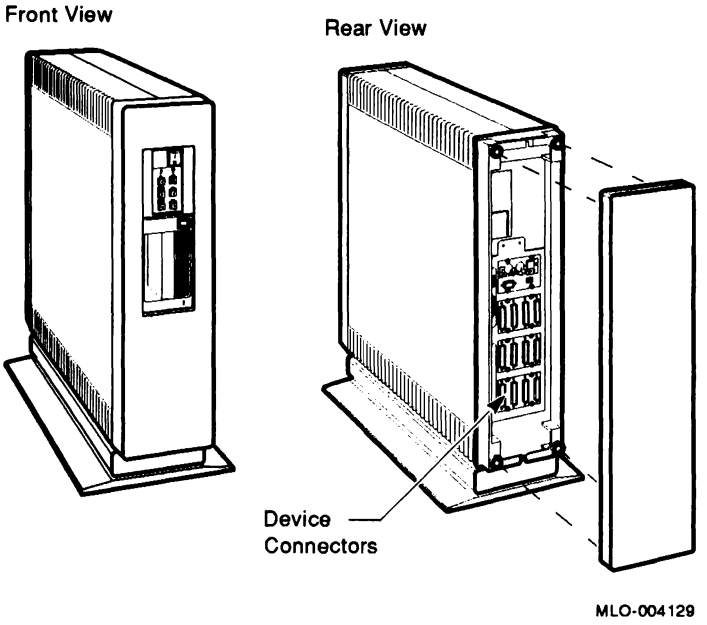

Figure 1–7 shows the BA123 type of system enclosure and device connector locations.

Figure 1–7 BA123 Device Connectors

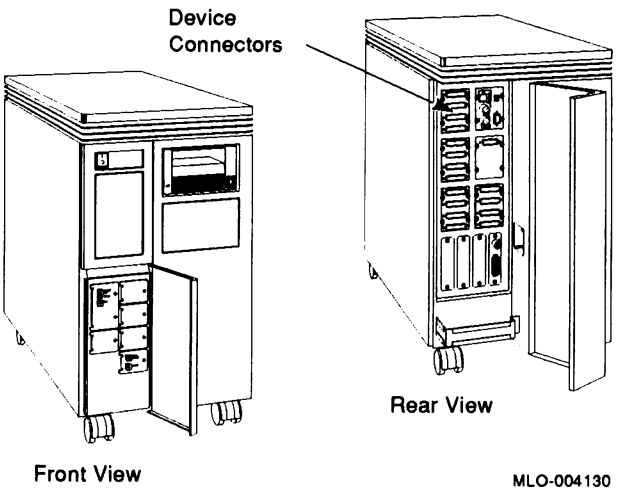

Figure 1–8 shows the BA213 type of system enclosure and device connector locations.

Figure 1–8 BA213 Device Connectors

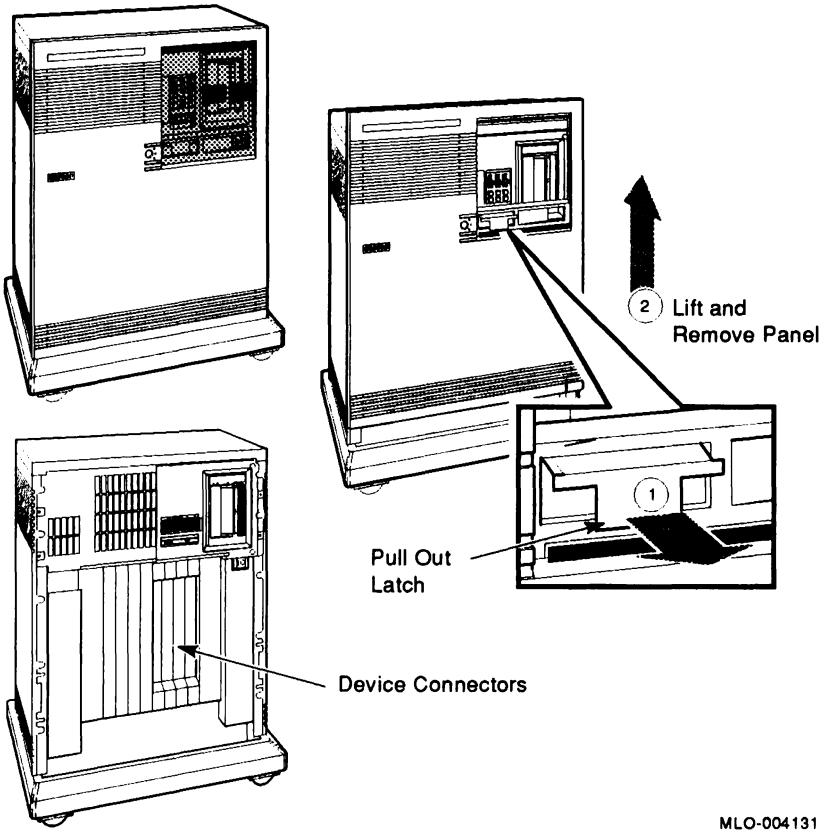

1.2.4 Direct Connection Installation

If you are performing a direct connection installation to the host VCS MicroVAX or workstation, read the following instructions. If performing a host initiated connection installation, read the instructions in Section 1.2.5.

1 Unpack the fiberoptic converters.

2 Unpack the H7133 16-tap power supply.

3 Peel back the label that covers the power supply voltage switch and check the voltage setting. If necessary, change the switch setting to match the voltage source. See Figure 1–9.

CAUTION *Damage to the power supply can occur if the voltage switch setting does not match the voltage source.*

Figure 1–9 H7133 16-Tap Power Supply Connections

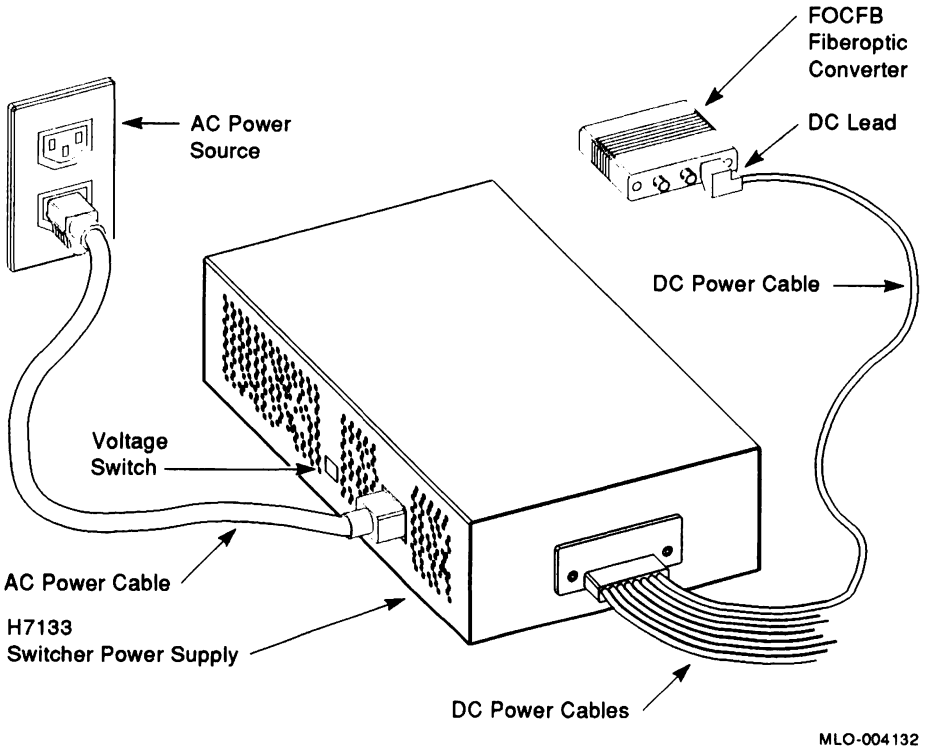

4 Place the H7133 16-tap power supply on or near the host system. For a BA23 or BA123 MicroVAX enclosure, run the DC power cable through the cable guides at the rear door of the enclosure.

CAUTION *Connect the DC power cable to the fiberoptic converter* ***BEFORE*** *applying AC power. Otherwise, the power supply can be damaged.*

5 Find an AC power source for the H7133 16-tap power supply. Figure 1–10 shows AC power plug types.

Note *Do not plug the power supply into any AC power source in the VCS host system.*

Figure 1–10 AC Power Plug Types

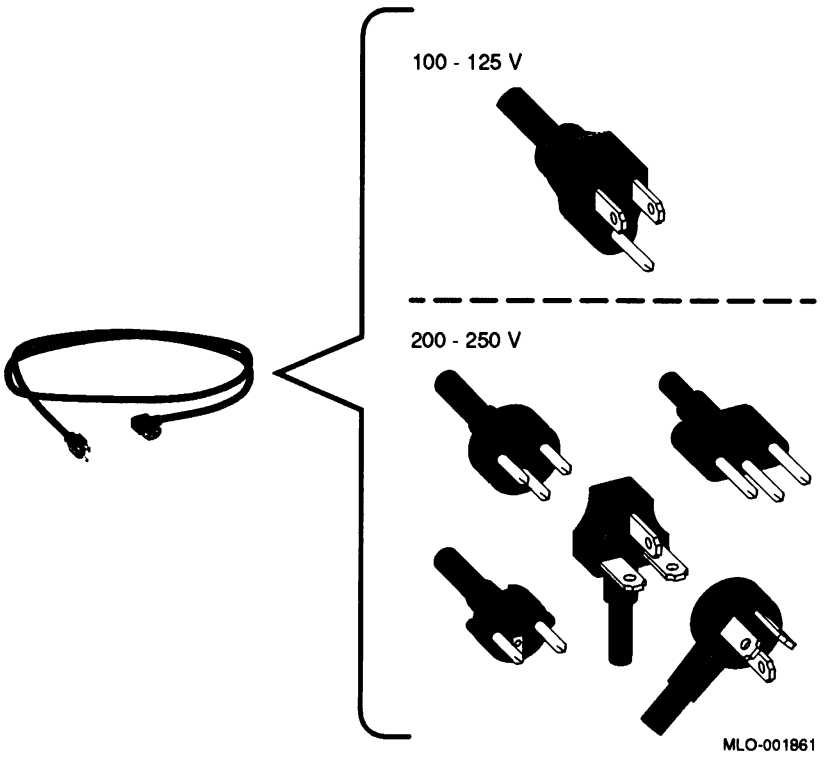

6 Make the following connections:

a Install each fiberoptic converter on any unused port on the processor bulkhead. For BA23 and BA123 enclosures, see Figure 1–11. For BA213 enclosures, see Figure 1–12.

Figure 1–11 BA23/BA123 Enclosure Bulkhead Connection

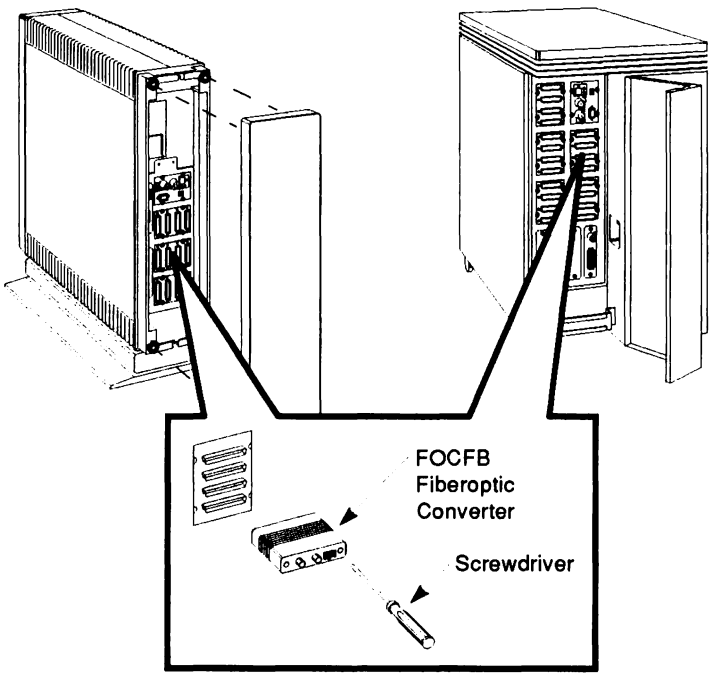

Figure 1–12 BA213 Enclosure Bulkhead Connection

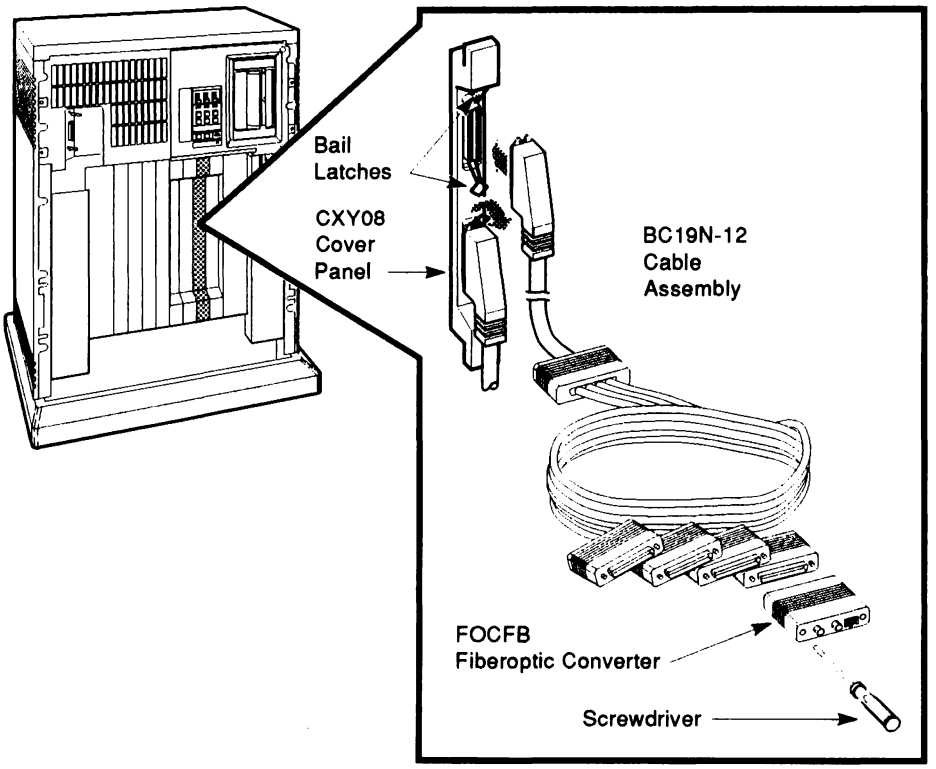

b Connect a DC power cable to each fiberoptic converter. See Figure 1–13.

c Plug the power supply AC power cable into the AC power source. The H7133 power supply powers on when plugged into an AC power source. See Figure 1–13.

CAUTION *To prevent damage, do not bind the installed fiberoptic converters together with cable ties, tape, or any other method.*

To prevent overheating, the fiberoptic converters need air to circulate around them.

Fiberoptic converters installed in a BA23 or BA123 system enclosure can also overheat when cables and converters block the air flow.

The back of these system enclosures can be cooled by the following:

- *Moving the system enclosure to a cooler area*
- *Opening or removing the back door*

Figure 1–13 H7133 16-Tap Power Supply Connections

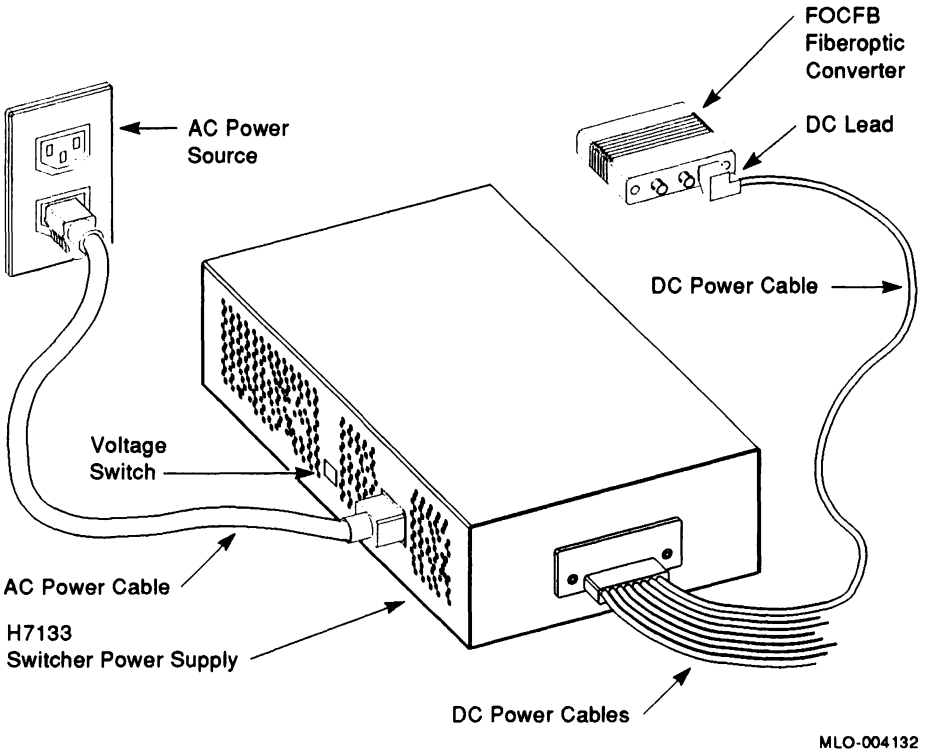

Note *An installed fiberoptic converter shows no visible indication of a successful connection. Refer to Section 1.2.7 for troubleshooting information.*

1.2.5 Host Initiated Connection Installation

The following instructions describe how to prepare the fiberoptic hardware for a host initiated connection installation to a DECserver 200 terminal server.

1 Install the DECserver 200 terminal server. A DECserver 200 terminal server is shown in Figure 1–14.

Figure 1–14 DECserver 200 Terminal Server

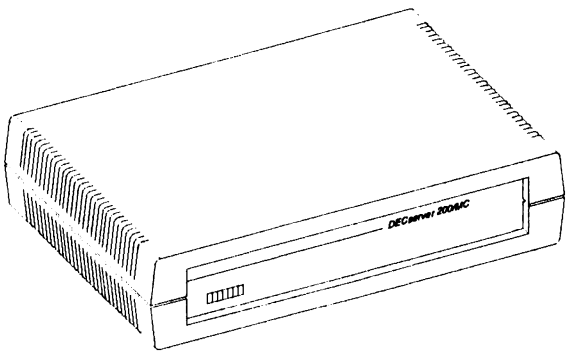

MLO-004135

For installation procedures, use the following documents:

- *DECserver 200 Installation/Owner's Guide*
- *DELNI Ethernet Local Network Interconnect Technical Manual*
- *H4000 Ethernet Installation Guide*

2 Unpack the fiberoptic converters.

3 Unpack the H7133 16-tap power supply.

4 Peel back the label that covers the power supply voltage switch and check the voltage setting. If necessary, change the switch setting to match the voltage source. See Figure 1–9.

CAUTION *Damage to the power supply can occur if the voltage switch setting does not match the voltage source.*

5 Place the H7133 power supply on or near the DECserver 200 terminal server.

CAUTION *Connect the DC power cable to the fiberoptic converter* ***BEFORE*** *applying AC power. Otherwise, the power supply can be damaged.*

6 Find an AC power source for the H7133 16-tap power supply. Figure 1–10 shows AC power plug types.

7 Make the following connections.

a Install each fiberoptic converter on any unused port on the DECserver 200 terminal server. See Figure 1–15.

Figure 1–15 DECserver 200 Connections

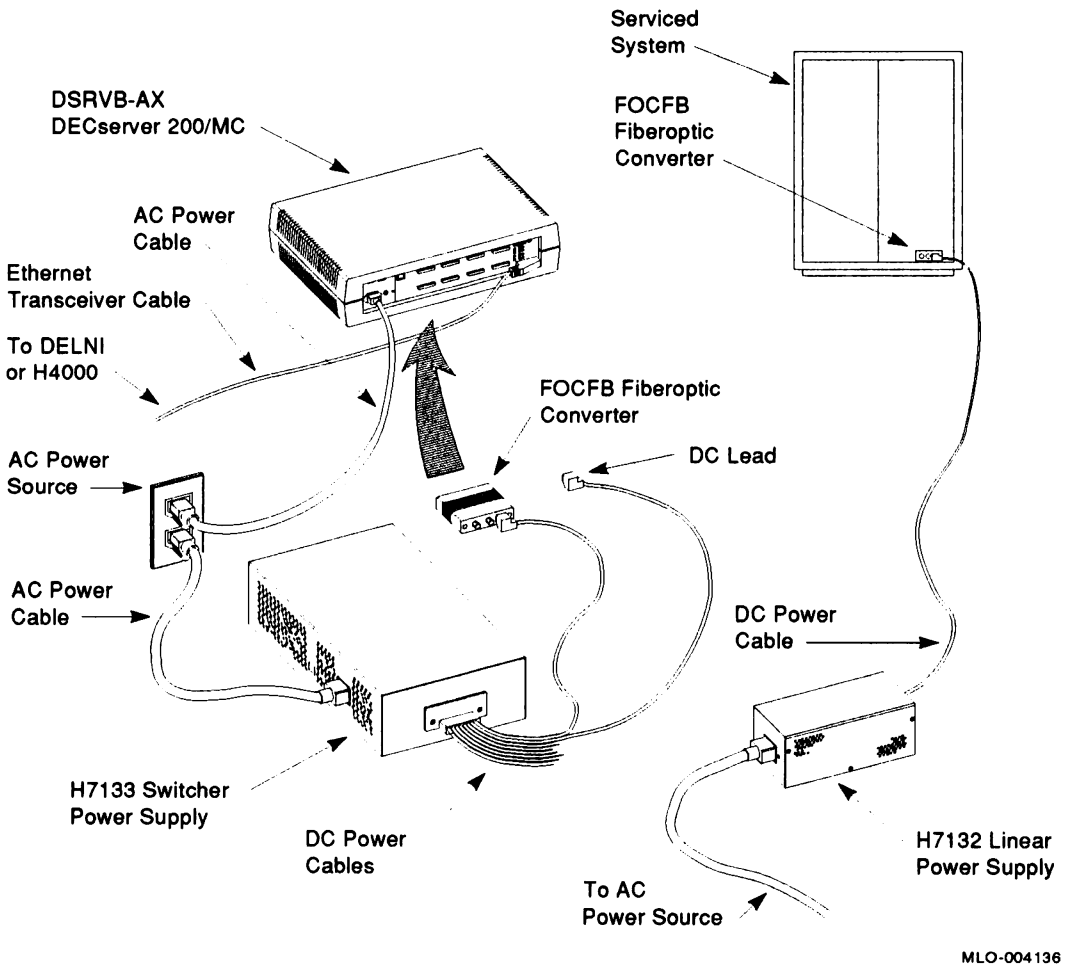

b Connect one power supply DC power cable to each fiberoptic converter as shown in Figure 1–13.

c Connect the H7133 16-tap power supply AC power cord to the AC power source as shown in Figure 1–13. The H7133 power supply powers on when plugged into the power source.

1.2.6 Fiberoptic Installation at the Serviced Nodes

This section describes how to install the fiberoptic hardware on VCS-serviced systems.

If a serviced system is a VAX 8830/8840 system, read the precautions in Section 1.1.3.1. If a serviced system is an HSC storage controller, read the precautions in Section 1.1.3.2.

For each serviced system, install the H7132 single-tap power supplies and the fiberoptic cables and converters as follows:

1 Plug the fiberoptic converter into the console port of the serviced system.

2 Place the H7132 single-tap power supply conveniently near the serviced system.

3 Connect the DC power cable to the fiberoptic converter. See Figure 1–16.

Figure 1–16 H7132 Single-Tap Power Supply Connections

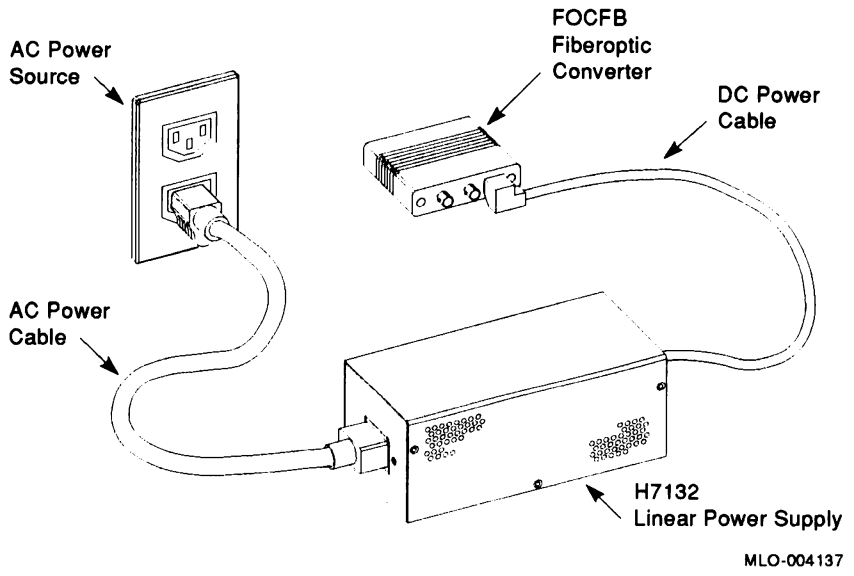

CAUTION ***BEFORE*** *applying AC power, connect the DC power cable to the fiberoptic converter. Otherwise, the power supply can be damaged.*

4 Find an AC power source for the H7132 power supply. Figure 1–10 shows AC power plug types.

Note *Do not plug the power supply into any AC power source in the serviced system.*

5 Plug the power supply AC power cable into the AC power source. See Figure 1–16. The H7132 power supply powers on when plugged into the AC power source.

6 Each fiberoptic cable is labeled with either a transmit strand or receive strand symbol on the connector as shown in Figure 1–17. Each fiberoptic connector jack contains a transmit jack and a receive jack. Each fiberoptic connector jack is labeled with either the transmit or receive symbol as shown in Figure 1–17. Install the fiberoptic cable between the fiberoptic converter at the host or DECserver and the fiberoptic converter at the serviced system. Match the symbols at the converter jacks with the symbols on the cables to connect the cable correctly.

Figure 1–17 Fiberoptic Connector Jacks

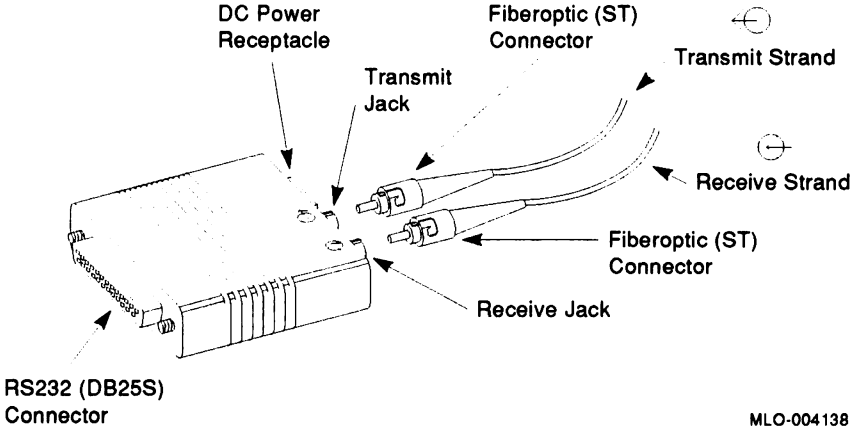

When a fiberoptic cable has been installed between the VCS host (or DECserver) and each system to be serviced by VCS, the configuration is ready to test.

1.2.6.1 Optional Extension Cable Installation The optional extension cable enables the fiberoptic converter to be placed away from the serviced node's console port. See Figure 1–18. Use the extension cable when the fiberoptic converter cannot be connected directly to the bulkhead for the following reasons:

- Not enough clearance exists to close the system enclosure door when the fiberoptic converter is installed, as with the VAX 8200 system.
- A ridge near the communications port prevents the fiberoptic converter from being connected directly to the communications port, as with the VAX 8700/8800's VAXconsole PRO380.

Figure 1–18 Console Extension Cable Connection

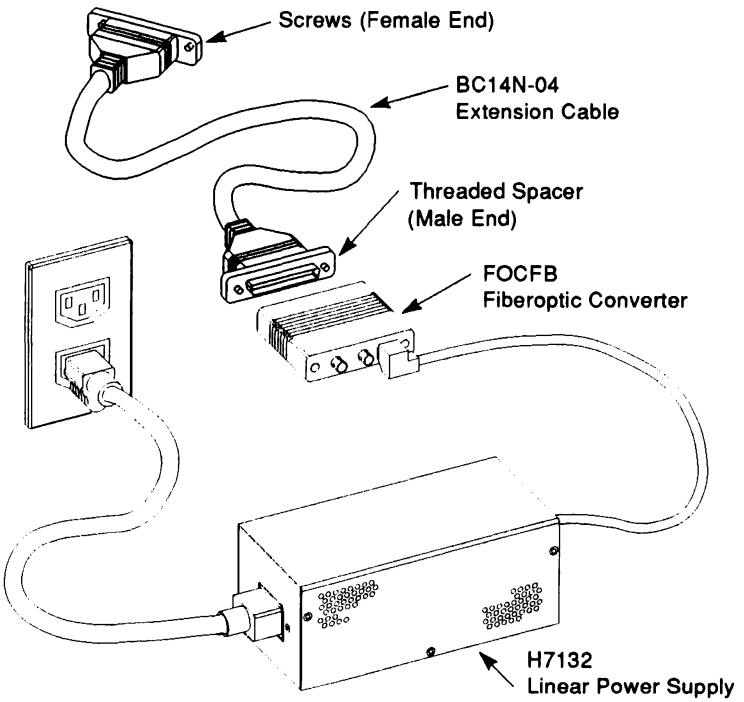

To connect the VCS host to the VAXconsole PRO380 of a VAX 8700 or 8800 system, connect the extension cable to the COMM 1 port as shown in Figure 1–19.

Figure 1–19 VAXconsole PRO380 COMM 1 Port

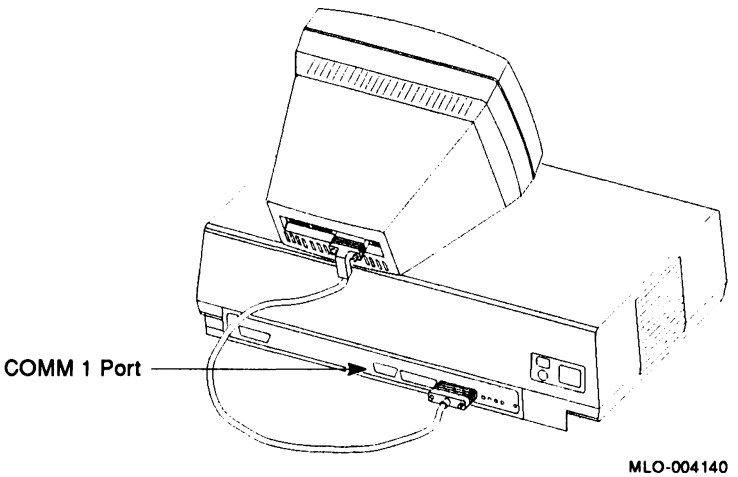

1.2.6.2 Optional DECconnect Cabling Installation Use the optional DECconnect components provided to connect the fiberoptic converter to MicroVAX and VAXstation systems with the BA23, BA123, and BA213 types of enclosures.

For the BA23 and BA123 types of enclosures, use the following optional components from the fiberoptic converter kit, as shown in Figure 1–20:

- 25-pin male adapter (H8571-C)
- 2-foot DECconnect cable (BC16E-02)
- 9-pin female adapter (H8571-B)

For the BA213 type of enclosure, use:

- 25-pin male adapter (H8571-C)
- 2-foot DECconnect cable (BC16E-02)

Figure 1–20 Optional DECconnect Cabling

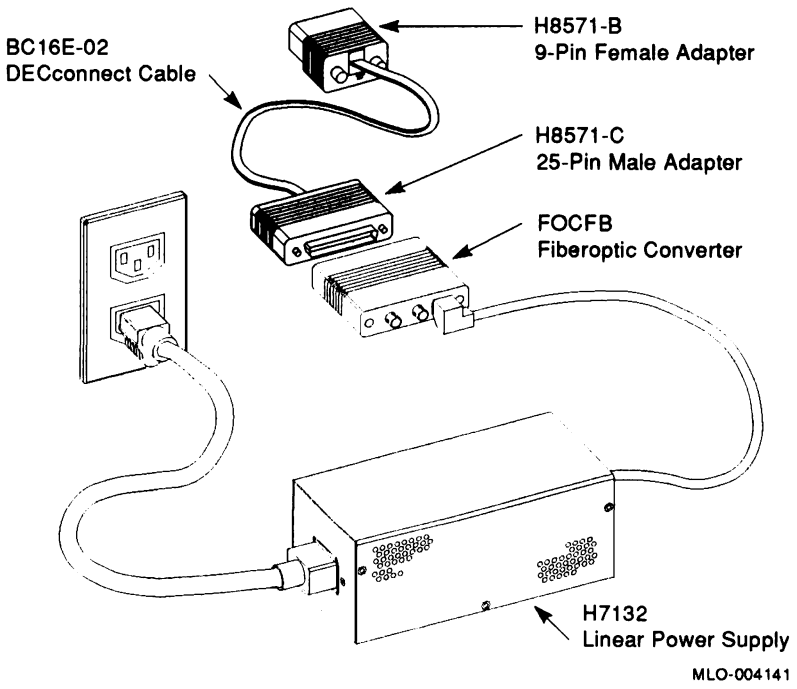

1.2.6.3 Optional VCS Disable Switch Installation Use the optional VCS disable switch to change to a local console terminal at a serviced node should the VCS host fail. Figure 1–21 shows VCS disable switch cabling connections.

Figure 1–21 VCS Disable Switch Cabling

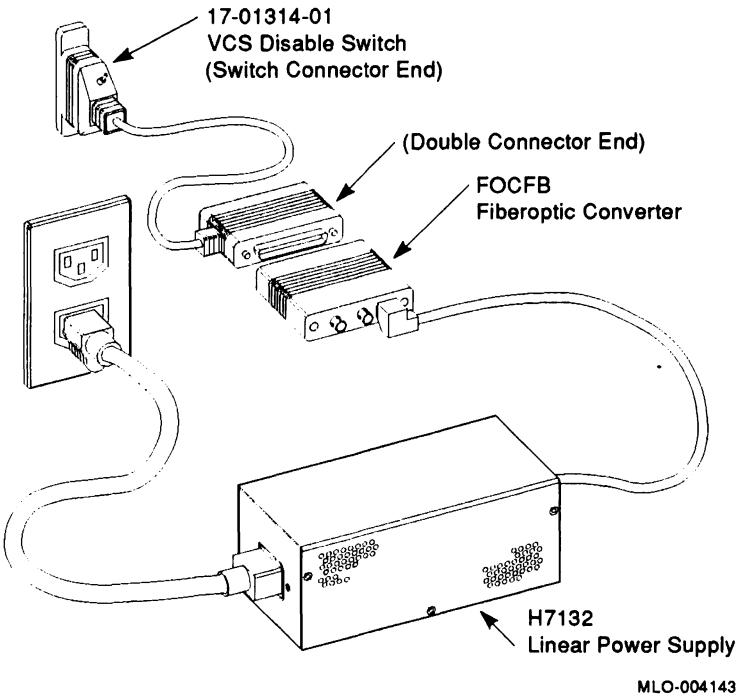

The VCS disable switch has two settings: **VCS** and **LOCAL**. To connect the serviced system's console line to the VCS host, set the switch to the **VCS** setting. To connect the serviced system's console line to the local terminal, set the switch to the **LOCAL** setting.

Install the VCS disable switch cable by performing the following procedures:

1 Plug the double connector female end into the console port of the serviced system. For a MicroVAX, plug the double connector female end into the H8571-C 25-pin adapter.

2 Plug the fiberoptic converter into the double connector end.

3 Plug the switch connector end into the terminal's communications port.

1.2.7 Fiberoptic Converter Troubleshooting

If the fiberoptic converter is not working correctly, do the following:

1 Ensure that ±12 voltages are present at each power supply DC output.

2 Ensure that the fiberoptic cable is connected correctly, as shown in Figure 1–17.

3 Replace the fiberoptic converter at the VCS end with a spare. If the spare does not correct the problem, reinstall the original converter and go to the next step.

4 Replace the fiberoptic converter at the serviced system with a spare. If the spare does not correct the problem, reinstall the original converter and go to the next step.

5 Replace the fiberoptic cable with a spare before stringing the new cable. Make sure this corrects the problem by testing the cables. Use the fiberoptic converter from the VCS host system and a terminal or a hand-held terminal (HHT).

1.3 VCS DECconnect Components

The VCS DECconnect hardware consists of DECconnect cables and DECconnect adapters. Each cable end is connected to an adapter.

The following DECconnect components are used for VCS:

- BC16E-xx DECconnect cable (xx denotes cable length)
- H8575-A 25-pin DECconnect adapter
- H8575-B 9-pin DECconnect adapter

Figure 1–22 shows the DECconnect hardware cable and adapters.

Figure 1–22 DECconnect Cable and Adapters

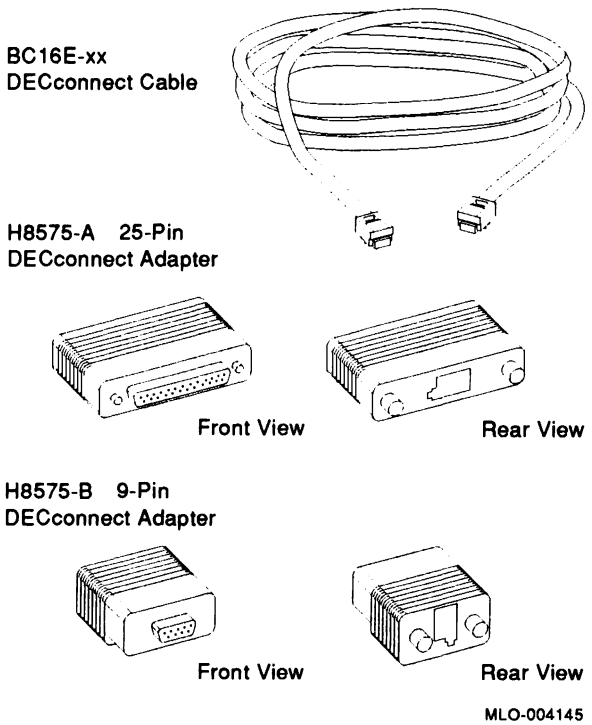

1.3.1 Preparing the Host System

To unpack and install the MicroVAX or VAXstation to be the VCS host system, follow the accompanying installation and configuration documentation. Include all add-on options such as the DHQ11, DZQ11, or CXY08 serial line interface devices.

BA23, BA123, and BA213 types of system enclosures are suitable for a VCS direct connection method of installation. Figure 1–23 shows the BA23 type of system enclosure and where to gain access the device connectors, to which the DECconnect adapters are installed.

Figure 1–23 BA23 Device Connectors

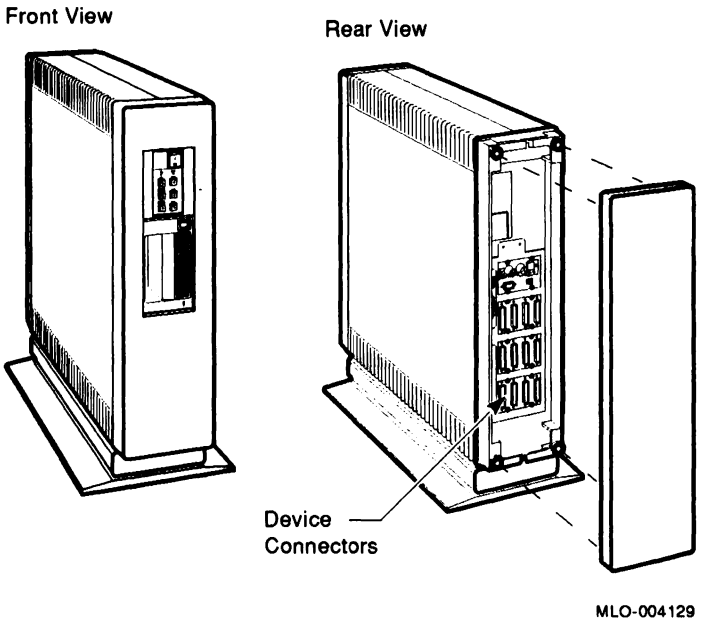

Figure 1–24 shows the BA123 type of system enclosure and device connector locations.

Figure 1–24 BA123 Device Connectors

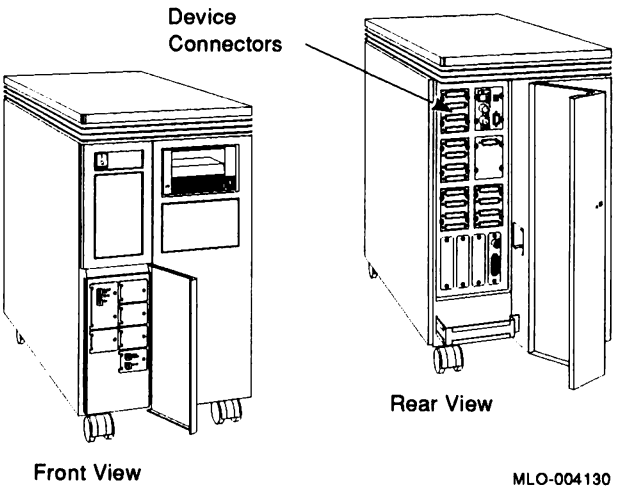

Figure 1–25 shows the BA213 type of system enclosure and device connector locations.

Figure 1–25 BA213 Device Connectors

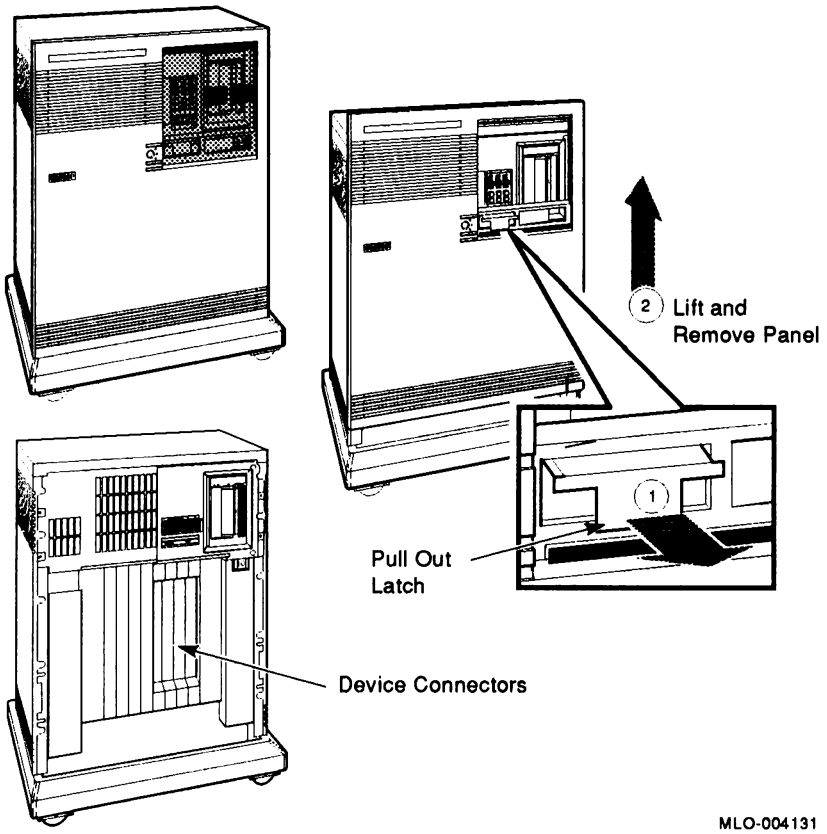

1.3.2 Direct Connection Installation

If performing a direct connection installation to the host VCS MicroVAX or workstation, read the following instructions. If performing a host initiated connection installation, read the instructions in Section 1.3.3.

1 Unpack the DECconnect adapters and cable.

2 Make the following connections:

   a Install each DECconnect adapter on any unused port on the processor bulkhead. For BA23 and BA123 enclosures, see Figure 1–26. For BA213 enclosures, see Figure 1–27.

Figure 1–26 BA23/BA123 Enclosure Bulkhead Connection

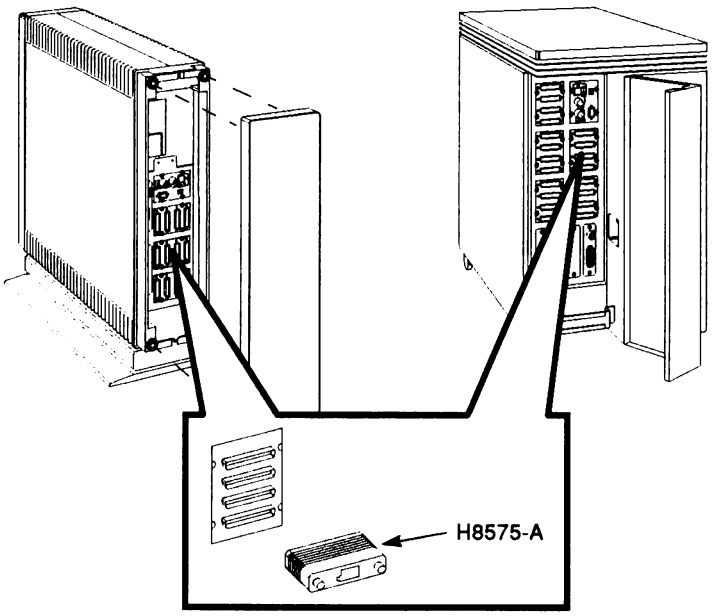

MLO-004147

Figure 1–27 BA213 Enclosure Bulkhead Connection

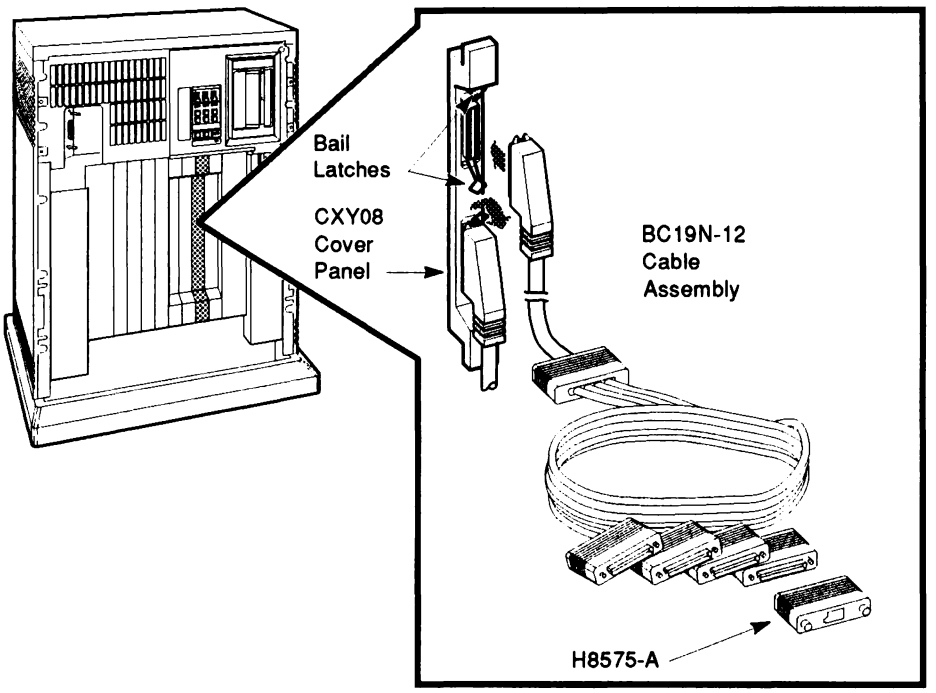

b Connect a DECconnect cable to each DECconnect adapter. See Figure 1–28.

Figure 1–28 DECconnect Adapter and Cable Connections

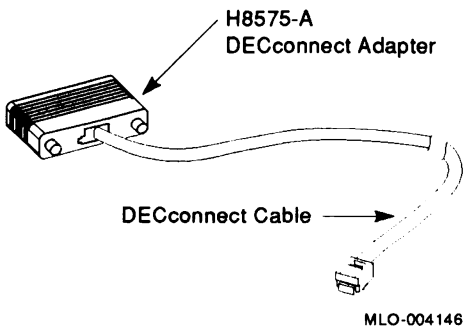

1.3.3 Host Initiated Connection Installation

The following instructions describe how to prepare the DECconnect hardware for host initiated connection installation to a DECserver 200 terminal server.

1 Install the DECserver 200 terminal server. A DECserver 200 terminal server is shown in Figure 1–29.

Figure 1–29 DECserver 200 Terminal Server

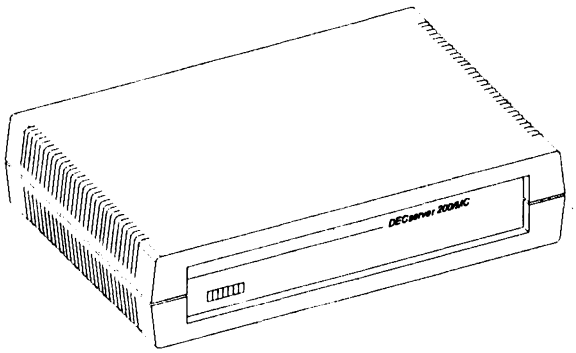

MLO-004135

For installation procedures use the following documents:

- *DECserver 200 Installation/Owner's Guide*
- *DELNI Ethernet Local Network Interconnect Technical Manual*
- *H4000 Ethernet Installation Guide*

2 Unpack the DECconnect adapters and cable.

3 Make the following connections:

a Install each DECconnect adapter on any unused port on the DECserver 200 terminal server.

b Connect one DECconnect cable to each DECconnect adapter as shown in Figure 1–30. See Figure 1–30.

Figure 1–30 DECserver 200 Connections

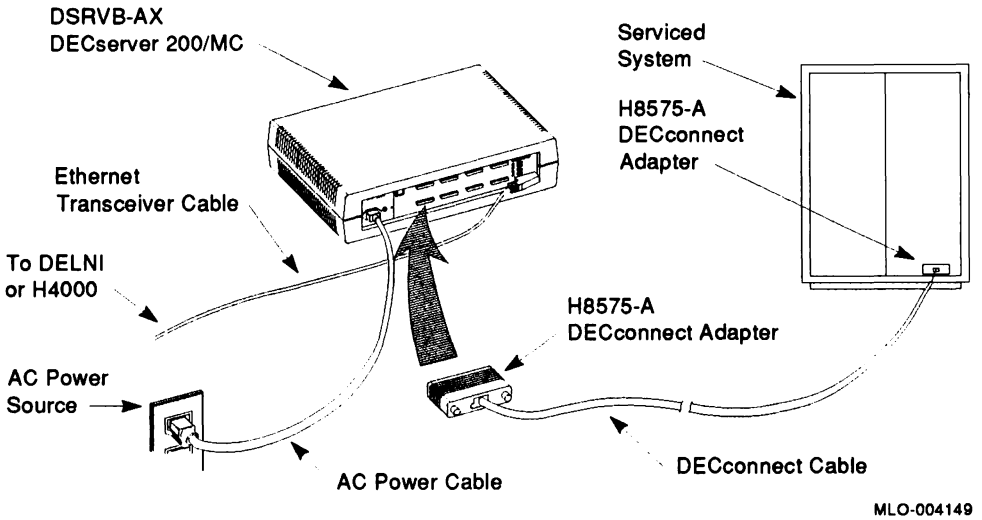

1.3.4 DECconnect Installation at the Serviced Nodes

This section describes how to install the DECconnect hardware on VCS-serviced systems.

If a serviced system is a VAX 8830/8840 system, read the precautions in Section 1.1.3.1. If a serviced system is an HSC storage controller, read the precautions in Section 1.1.3.2.

For each serviced system, install the DECconnect cables and adapters as follows:

1 Plug the DECconnect adapter into the console port of the serviced system.

2 Connect the DECconnect cable to the DECconnect adapter. See Figure 1–31.

Figure 1–31 DECconnect Adapter and Cable Connections

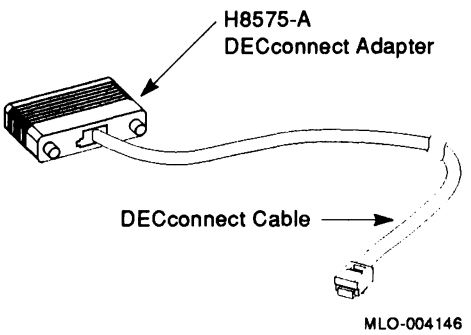

When a DECconnect cable has been installed between the VCS host (or DECserver) and each system to be serviced by VCS, the configuration is ready to test.

1.3.5 DECconnect Adapter Troubleshooting

If the DECconnect adapter is not working correctly, do the following:

1. Ensure that the DECconnect adapter is seated correctly.
2. Ensure that the DECconnect cable ends are connected correctly.
3. Ensure that the baud rates at both ends are the same.
4. Ensure that the software parameters are set correctly.
5. Disconnect the DECconnect adapter from the serviced system and connect the adapter directly into a terminal port. Type some characters. If this does not correct the problem, reinstall the DECconnect adapter to the serviced system and continue to the next step.
6. Replace the DECconnect adapter at the VCS end with a spare. If the spare does not correct the problem, reinstall the original adapter and go to the next step.
7. Replace the DECconnect adapter at the serviced system with a spare. If the spare does not correct the problem, reinstall the original adapter and go to the next step.
8. Replace the DECconnect cable with a spare. Make sure this corrects the problem. Use the DECconnect adapter from the VCS host system and a terminal.

Refer to the *DECconnect System Planning and Configuration Guide* for more troubleshooting information about DECconnect cables and adapters.

2

Software Installation

This chapter describes how to prepare for and perform the VCS Version 1.3 software installation on a VCS host system. The installation process is organized in the following manner:

- Section 2.1 describes the contents of the VCS software product kit.
- Section 2.2 describes the installation preparation of the VCS host system.
- Section 2.3 describes the installation preparation for VAX 8500, 8700, or 8800 series systems.
- Section 2.5 describes how to make site specific modifications to the installed VCS software environment.
- Section 2.6 describes how to start up the VCS software
- Section 2.7 describes the final adjustments to make to the VCS serviced systems.

2.1 VCS Software Kit Inventory

The VCS software kit consists of the VCS software distribution medium and the VCS Product Authorization Key (PAK). The PAK is a piece of paper containing the VCS software license information that must be entered during the software installation.

2.2 VCS Host System Preparation

The VCS software installation requires a minimum of 20 minutes. This time includes reading the installation instructions, performing the actual installation using VMSINSTAL, and creating the site-specific information. If unfamiliar with VMSINSTAL, VMS, LAT, or the configuration of the serviced nodes, allow an additional two hours for reading the referenced documentation and gathering the required information.

2.2.1 Required Software

VMS Version 5.3 must already be installed on the system before the VCS software can be installed. Enter the following command to determine what version of VMS is running.

```
$ SHOW SYSTEM  Return
```

The first line of the response indicates the version of VMS. This version of VMS should contain the latest version of VAXTPU, which is included in the UTIL kit of the VAX/VMS full kit.

Install the VCS software using VMSINSTAL, the standard VMS installation procedure. If unfamiliar with VMSINSTAL, read the information in the *VMS System Manager's Manual.*

2.2.2 Required Disk Space

Before the VCS software can be installed, a minimum of 7000 free blocks on the system disk is required. Enter the following command to determine the number of free blocks on the system disk:

```
$ SHOW DEVICE SYS$SYSDEVICE:  Return
```

The approximate disk block utilization requirements are:

7000 blocks, maximum peak disk-block utilization
2000 blocks, maximum net disk-block utilization

In addition, the VCS software requires a minimum of 1.5 megabytes of disk space, per month, per node in the cluster for the logging function. This space is in addition to the normal disk space requirements of the VCS host system software. This should permit the VCS software to keep log data files for the system consoles managed by the VCS software for up to a month.

2.2.3 User Terminals

The number of terminals needed to use the VCS software effectively depends on the user environment. If the site does not require simultaneous access to the consoles of the various nodes, a single terminal device as the console may be sufficient. However, if competition for access to the consoles is a norm at the site, additional user terminals should be available to the VCS software.

Simultaneous access exists when the operations staff and Digital Customer Service engineers need to perform different tasks on different serviced nodes at the same time. Digital Field Service engineers need access to consoles through the VCS software with reasonable proximity to the processors they are working on.

Network support greatly increases the flexibility and availability of the VCS software. Any terminal on the network can be used to access the VCS software.

2.2.4 SYSGEN Parameters

Modifications to a number of SYSGEN parameters need to be performed for the VCS software to run properly. Place the following entries in the SYS$SYSTEM:MODPARAMS.DAT file to change the parameters. If the following values conflict with currently defined values, add the following entries only if their values are greater than the current values.

- TTY_ALTALARM = 320
- TTY_ALTYPAHD = 1000
- PQL_MDIOLM = 64

Add the following entry if using host initiated connection devices for console connections:

- LRPSIZE = 1504

Digital recommends adding the following entries if other software applications coexist with the VCS software product:

- SRPCOUNT = 410
- IRPCOUNT = 300
- LRPCOUNT = 25

Execute SYS$UPDATE:AUTOGEN.COM and reboot the host system to embed these values. Because the system is still in the preparation stage of the VCS software installation, rebooting of the system at this time may not be advisable. A reminder to initiate the AUTOGEN facility is provided at the end of the installation Section 2.6. For more information on the AUTOGEN facility, see the *Guide to Setting Up a VMS System*.

2.2.5 Host Initiated Connection Setup

When setting up host initiated connections, the VCS host system and the DECserver 200 must reside on the same Ethernet. When an Ethernet is comprised of two separate Ethernet segments joined by a LAN Bridge device, the DECserver 200 is supported as a LAT interface device.

The host initiated connection extends the logical I/O channels between the VCS host system and the terminal bulkheads located on a DECserver, over the Ethernet medium. The setup involves defining the DECserver port characteristics for host initiated connections and creating LTA devices on the VCS host system which are mapped to those ports.

If planning to use host initiated connections, create the LTA devices before running the Configuration Editor.

2.2.5.1 Setting Up DECserver 200 Ports Before you set up the DECserver ports, the DECserver must be connected to the Ethernet and be ready to be loaded from a VAX system. A terminal must also be connected to the DECserver console port 1. Refer to the *DECserver 200 Hardware Installation/Owner's Guide* for additional information. Use the TSM in place of the local DECserver console terminal if the Terminal Server Manager (TSM) product is installed. Refer to the *Guide to Terminal Server Manager* for additional information about TSM.

Unless aware of the actual characteristics of the DECserver, perform the following steps to initialize the DECserver to a known state. However, if other devices are also being serviced by the DECserver, skip step 1 to avoid resetting their port characteristics.

1 Use the red software reset switch (S1) located on the DECserver control/indicator back panel to restore factory-set characteristics to the DECserver's permanent database. To disconnect the DECserver power, remove the power cord from the back panel. While pressing the red software reset switch, simultaneously apply the power to the DECserver by reconnecting the power cord. Approximately one minute is required for the DECserver to be reloaded.

   The software reset switch is shown in Figure 2–1.

Figure 2–1 DECserver 200 Back Panel

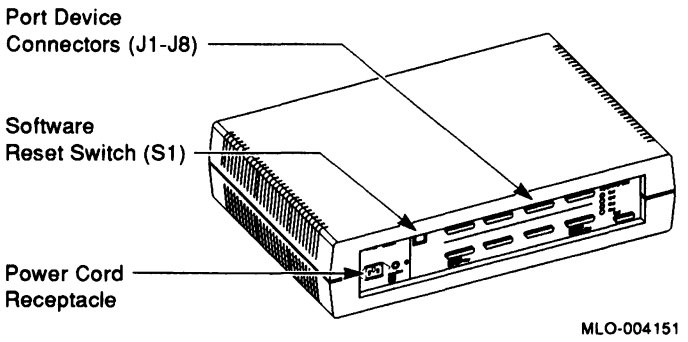

2 At the terminal keyboard, press Return twice to connect to the DECserver. The DECserver displays the following message:

```
DECserver 200 Terminal Server V2.0 (BL29) -- LAT V5.1
Please type HELP if you need assistance
Enter username>
```

3 Enter the user name. The DECserver responds with the **Local>** prompt.

4 Enter the factory-set password SYSTEM to enable the privileges on the DECserver:

```
Local> SET PRIVILEGE [Return]
Password>
```

Enter the following command to change the factory-set privileged password:

```
Local> DEFINE SERVER PRIVILEGED PASSWORD password [Return]
```

5 Locate the DECserver name by entering the command:

```
Local> SHOW SERVER [Return]
```

The second line of the response displays the address, name, and number of the DECserver. The DECserver name is required to define the LTA devices in Section 2.2.5.2. Use the command DEFINE SERVER NAME to change the default DECserver name.

Perform the following steps for each DECserver port being used for the VCS host initiated connections:

Note *If Port 1 is used as a host initiated connection, perform the following steps on Port 1 last. Step 11 requires logging off the port and then repeating the entire procedure. Doing so and not performing the steps on Port 1 last prevents reconnection to Port 1 once disconnected.*

6 Define the port name:

```
Local> DEFINE PORT n NAME VCS0n [Return]
```

In the following steps, *n* is always the DECserver port which can be in the range of 1 to 8.

7 Define the port speed:

```
Local> DEFINE PORT n SPEED baud [Return]
```

Baud is baud rate.

8 Define the *reverse* characteristic:

```
Local> DEFINE PORT n ACCESS REMOTE [Return]
Local> DEFINE PORT n BREAK REMOTE [Return]
```

9 Disable the AUTOBAUD, AUTOPROMPT, and BROADCAST characteristics:

```
Local> DEFINE PORT n AUTOBAUD DISABLE [Return]
Local> DEFINE PORT n AUTOPROMPT DISABLE [Return]
Local> DEFINE PORT n BROADCAST DISABLE [Return]
```

10 Disable the default LAT group 0. Enable a unique LAT group number so that only the VCS host system controls this port:

```
Local> DEFINE PORT n AUTHORIZE GROUP 0 DISABLE [Return]
Local> DEFINE PORT n AUTHORIZE GROUP group ENABLE [Return]
```

The LAT group number is required to define the LTA devices in Section 2.2.5.2. **Define the same group number for all the VCS host initiated connection ports of the same DECserver.**

11 Activate the port characteristics by logging off the port.

```
Local> LOGOUT PORT n [Return]
```

Repeat steps 6 through 11 for each DECserver port.

2.2.5.2 Using VCS$LTA.COM to Create LTA Devices The VCS$LTA.COM procedure invokes the LATCP program, which defines the LTA devices and maps the DECserver ports. The procedure uses the following parameters:

@SYS$MANAGER:VCS$LTA.COM *device-range server port-range group*

This DCL command requires that the following information:

device-range The numeric range allowed for LTA devices. The range format is:

$$number_1[-number_2]$$

where $number_1$ is the beginning and $number_2$ is the ending of the range. The range can be in either ascending or descending order. The device numbers must be from 1 to 999. There are no spaces surrounding the hyphen character.

The number of devices specified by this range must be equal to the number of ports specified by *port-range*. The VCS$LTA.COM procedure checks for and notifies of any discrepancies between the two ranges.

server The name of the DECserver whose ports are mapped to the specified host initiated connection devices. LATCP enables a DECserver name to be specified before the name is entered into the DECserver's database (see Step 5 in Section 2.2.5.1). Ensure that the specified name is defined in the intended DECserver's database before starting the VCS software. Otherwise, the VCS software fails when trying to establish a connection to the fictitious DECserver.

port-range The numeric range allowed for DECserver ports. The port range format is:

$$number_1[-number_2]$$

where $number_1$ is the beginning and $number_2$ is the ending of the range. The range can be in either ascending or descending order. The port numbers must be from 1 to 8 for a DECserver 200 device, and from 1 to 16 for a DECserver 300 device. Note that there are no spaces surrounding the hyphen character.

The number of ports specified by this range must be equal to the number of devices specified by *device-range*. VCS$LTA.COM checks for and notifies of any discrepancies between the two ranges.

group The unique LAT group number, defined for the ports in the DECserver and required for the VCS host system to gain control of those ports. (See Step 10 in Section 2.2.5.1).

The following command examples show how to create host initiated connection devices using the VCS$LTA.COM procedure:

1 `$ @SYS$MANAGER:VCS$LTA.COM 9 VCSDS0 8 34` Return

Creates a single host initiated connection device LTA9. The device is mapped to the port VCS08 of the DECserver 200 named VCSDS0. The LAT group number 34 is required to gain control of the VCSDS0 port VCS08.

2 `$ @SYS$MANAGER:VCS$LTA.COM 13-10 VCSDS1 1-4 29` Return

Creates four host initiated connection devices LTA13, LTA12, LTA11, and LTA10. Next, these devices are mapped to the ports VCS01, VCS02, VCS03, and VCS04 of the DECserver 200 (named VCSDS1) in the specified order. The LAT group number 29 is required to gain control of the VCSDS1 ports VCS01 through VCS04.

2.3 Installation Preparation for the VAX 8500/8700/8800 Series Systems

Note *The information in this section is applicable only if you are installing the VCS software to manage a VAX 8500, 8700, or 8800 series system. If you are not doing so, continue reading at Section 2.4.*

These VAX series systems have either a PRO380 or a MicroVAX II as the console subsystem. This console subsystem is called the *VAXconsole*. The VAXconsole is a secondary computer that resides outside of the VAX system cabinets. Unlike other VAX systems (for example, VAX 8600) where the VCS software connects directly to the OPA0 port on the back of the system main cabinet, the VCS software is connected to this series of systems through the VAXconsole.

2.3.1 VAX 8500/8700/8800

The VCS software must be connected to one of these systems using the remote port of the VAXconsole PRO380. This port is located on the back of the VAXconsole system box and labeled **COMM 1**. A number of steps must be performed to set up the remote port on the VAXconsole before communications between the VAXconsole and the VCS host system can be established. For more information about the VAXconsole commands described in the following steps, refer to the *VAX 8800/8700/8550/8500 Console User's Guide.*

Note *The following steps are valid only for the PRO380 Console V9.3 software.*

Digital recommends that the VCS system and the VAXconsole ***not*** *share the same OPA0 device. Sharing the same console device can cause data flow control problems which can hang the VAXconsole. Use the VCS system to utilize the OPA0 device since its purpose is to consolidate console management. The OPA5 device is normally not enabled by default as an operator terminal during VAX/VMS system startup. Thus, valuable information is not logged by the VCS system during the early stages of VAX/VMS system startup. Enabling the OPA5 device as an operator terminal has the added disadvantage of doubling the I/O load on the VAXconsole system. For this reason Digital does not recommend that the OPA5 device be enabled as an operator terminal for a great length of time.*

Perform the following steps at the VAXconsole local terminal keyboard:

1 Log into the system manager's account, SYSTEM.

2 Issue the following commands to connect the OPA5 device:

```
$ MCR SYSGEN [Return]
SYSGEN> CONNECT CONSOLE/REMOTE [Return]
SYSGEN> EXIT [Return]
```

The above commands should also be added to SYS$STARTUP:SYSTARTUP_V5.COM for subsequent system reloads to connect the OPA5 device at startup.

3 Log out of the system manager's account.

4 Enter the VAXconsole Console Mode by pressing Ctrl/P. The VAXconsole responds with the >>> prompt.

5 Enter the EXIT command to return the console program from the Micromonitor to the Console Command Language.

```
>>> EXIT [Return]
```

6 Press Main Screen to return to the VAXconsole PRO P/OS Stand-Alone Main Menu.

7 From the Stand-Alone Main Menu select **PRO/Communications V3.0**.

8 Press Set-Up to display the Communications Menu.

9 Select the **Setup** menu.

10 Select **Setup Communications Line**.

11 The Communication Line Setup Menu displays the current setup values. Adjust the values to equal those given in Figure 2–2.

Figure 2–2 VAXconsole PRO380 Communication Line Setup Menu

```
          Communication Line Setup Menu

Receive speed (baud)        speed-of-your-choice
Transmit speed (baud)       Receive
Character type              8 bits, no parity
Number of stop bits         1
XOFF control                Enabled
Autoanswer                  Disabled
Remote access               Disabled
Connection type             Hardwired
```

12 Press Exit to accept the new values and return to the **Setup** Menu.

13 Select **Save Setup** to save the new values.

14 Select items **Clear Comm** to activate the new port characteristics, and **Reset** to reset the remote port.

15 Press Main Screen to return to the VAXconsole PRO P/OS Stand-Alone Main Menu.

16 Select **CONSOLE/PRODCL** to enter the console program. The Console Program takes about 20 seconds to be fully operational. When ready, the VAXconsole responds with the >>> prompt.

17 Enter the following command, which sets the remote port to NO MODEM:

```
>>> DISABLE REMOTE MODEM Return
```

NO MODEM is required because the connection between the VCS host system and the VAXconsole is a hardwired RS232 line.

18 Enter the following command, which enables the VCS software to communicate with the VAXconsole through the remote port as a user terminal:

```
>>> ENABLE REMOTE USER Return
```

19 Enter the following command, which enables the VCS software to communicate with the VAXconsole through the remote port as a console terminal:

```
>>> REMOTE CONSOLE Return
```

20 Enter the following command to set the remote VAXconsole port to OPA0:

```
>>> SET REMOTE TERMINAL OPA0 Return
```

21 Enter the following command to set the VAXconsole local terminal to OPA5:

```
>>> SET TERMINAL OPA5 Return
```

22 Enter the following command, which enters the VAXconsole into program I/O mode:

```
>>> SET TERMINAL PROGRAM Return
```

23 Login to the system manager's account to verify that the OPA5 device is operational.

The VAXconsole remote port has been successfully set up.

2.3.2 VAX 8830/8840

At each of the VAX 8830/8840 series systems, perform the following steps at the VAXconsole local terminal keyboard:

1 Enter the VAXconsole Console Mode by pressing Ctrl/P. The VAXconsole responds with the prompt **PS-HW-0>**. This is one of the prompts displayed by the VAXconsole, depending on the current console mode. See Chapter 2 of the *VAX 8840/8830 Console User's Guide* for additional information about the VAXcluster Console Mode.

2 Enter the following command, which enables the VCS host system to communicate with the VAX through the central terminal port.

```
PS-HW-0> ENABLE CENTRAL CONSOLE Return
```

3 Enter the following command to place the VAXconsole into program I/O mode:

```
PS-HW-0> SET TERMINAL PROGRAM Return
```

2.3.3 Preparation Work Sheets

Use the work sheets in Figures 2–3 and 2–4 to record the information to be used by the VCS Configuration Editor.

Figure 2–3 Work Sheet, Nodes 1 to 16

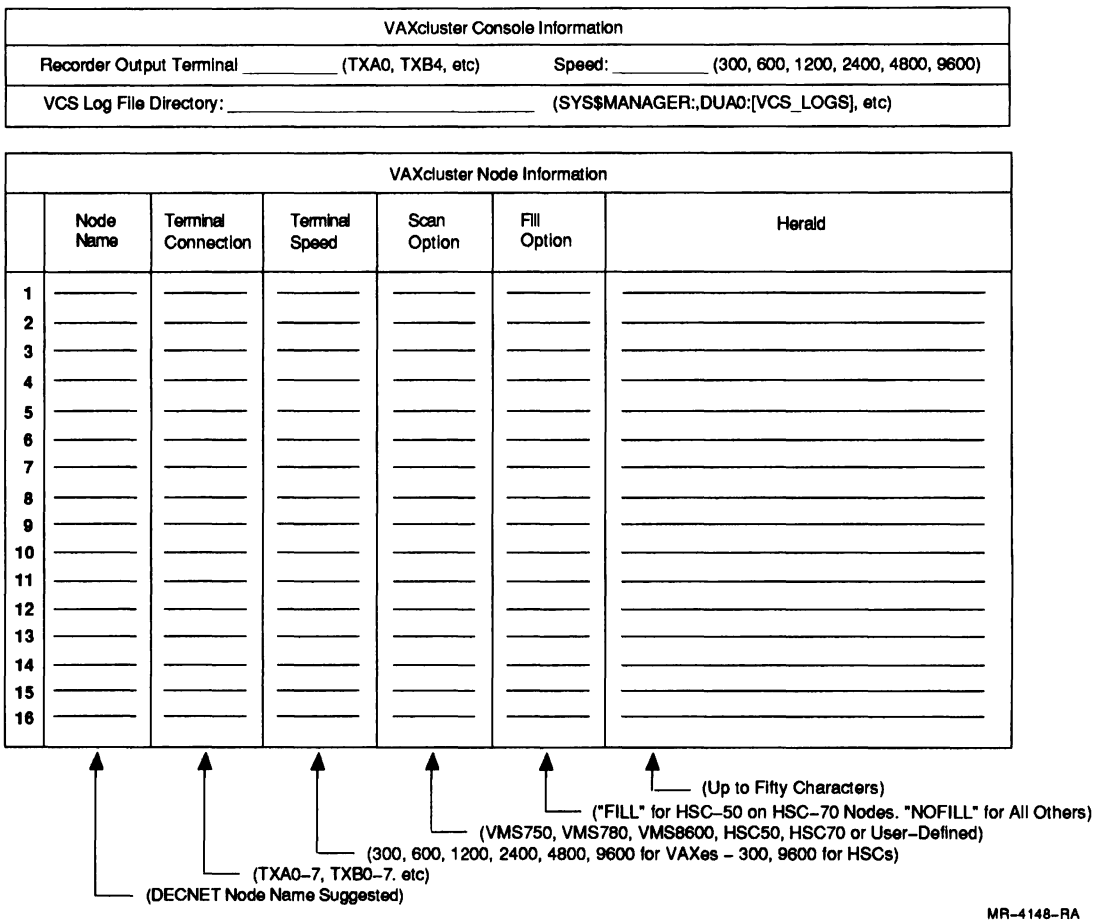

Figure 2–4 Work Sheet, Nodes 17 to 32

VAXcluster Console Information	
Recorder Output Terminal _____ (TXA0, TXB4, etc)	Speed: _____ (300, 600, 1200, 2400, 4800, 9600)
VCS Log File Directory: _____	(SYS$MANAGER:,DUA0:[VCS_LOGS], etc)

VAXcluster Node Information						
	Node Name	Terminal Connection	Terminal Speed	Scan Option	Fill Option	Herald
17						
18						
19						
20						
21						
22						
23						
24						
25						
26						
27						
28						
29						
30						
31						
32						

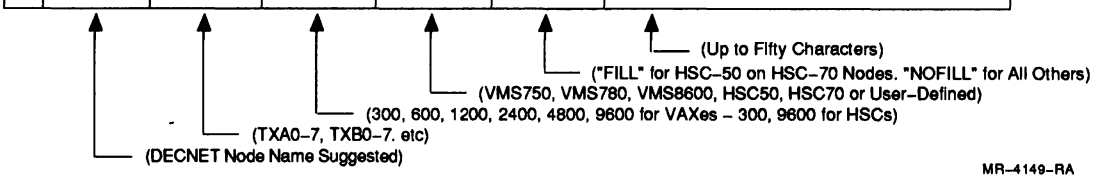
(Up to Fifty Characters)
("FILL" for HSC–50 on HSC–70 Nodes. "NOFILL" for All Others)
(VMS750, VMS780, VMS8600, HSC50, HSC70 or User–Defined)
(300, 600, 1200, 2400, 4800, 9600 for VAXes – 300, 9600 for HSCs)
(TXA0–7, TXB0–7. etc)
(DECNET Node Name Suggested)

MR–4149–RA

2.4 Installation of the VCS Software on the Host System

The VCS software installation includes the registration of the product license information and the actual installation of the software.

2.4.1 License Registration

License registration is required before the VCS software can be run. The license registration requires response to a series of questions prior to the software installation. Issue the following command to register and load the VCS software license:

```
$  @SYS$UPDATE:VMSLICENSE [Return]

    VMS License Management Utility Options:

        1. Register a Product Authorization Key
        2. Amend an existing Product Authorization Key
        3. Cancel an existing Product Authorization Key
        4. List Product Authorization Keys
        5. Modify an existing Product Authorization Key

        9. Exit this procedure

    Type '?' at any prompt for a description of the information
    requested.

Enter one of the above choices [1]: [Return]
Do you have your Product Authorization Key? [YES]: [Return]

   The REGISTER option allows you add a new license to a license
   database.  A Product Authorization Key (PAK) provides the product
   name and information you need to register the license.  You must
   enter all the information provided by your PAK exactly as specified.

PAK ID:
                      Issuer [DEC]: [Return]
         Authorization Number []:  AWS-ZK-88582-1 [Return]

PRODUCT ID:
                 Product Name []: VAXCLUSTER-CONSOLE [Return]
                     Producer [DEC]: [Return]

NUMBER OF UNITS:
              Number of Units []:  3200 [Return]

KEY LEVEL:
                       Version []:  1.3 [Return]

KEY TERMINATION DATE:
         Key Termination Date []:  30-JUN-1990 [Return]

RATING:
      Availability Table Code []: [Return]
          Activity Table Code []:  CONSTANT=100 [Return]
```

```
MISCELLANEOUS:
                  Key Options []: Return
                Product Token []: Return
                  Hardware-Id []: Return
                     Checksum []: 1- INDP-KHJJ-KIFB-COAF Return

      License Database File:  SYS$COMMON:[SYSEXE]LMF$LICENSE.LDB
                      Issuer:  DEC
               Authorization:  AWS-ZK-88582-1
                    Producer:  DEC
                Product Name:  VAXCLUSTER-CONSOLE
                       Units:  3200
                        Date:
                     Version:  1.3
           Termination Date:  30-JUN-1990
                Availability:
                    Activity:  CONSTANT=100
                     Options:
                       Token:
                 Hardware ID:
                    Checksum:  1-INDP-KHJJ-KIFB-COAF

Is this information correct? [YES]: Return
Registering VAXCLUSTER-CONSOLE license in SYS$COMMON:[SYSEXE]LMF$LICENSE.LDB...

Do you want to LOAD this license on this system? [YES]: Return
%LICENSE-I-LOADED, DEC VAXCLUSTER-CONSOLE was successfully loaded with 0 units

    VMS License Management Utility Options:

        1. Register a Product Authorization Key
        2. Amend an existing Product Authorization Key
        3. Cancel an existing Product Authorization Key
        4. List Product Authorization Keys
        5. Modify an existing Product Authorization Key

        9. Exit this procedure

    Type '?' at any prompt for a description of the information
    requested.

Enter one of the above choices [1]:  9 Return
$
```

2.4.2 Installation Procedure

Install the VCS software by performing the following steps:

1. Log in to the system manager's account, SYSTEM.
2. Issue the following command to identify the appropriate local load device for the software kit medium:

```
$ SHOW DEVICE /FULL Return
```

3 Enter the following command to run the VMSINSTAL software:

```
$ @SYS$UPDATE:VMSINSTAL VCS013 device
```

where *device* is the local load device identified in the previous step.

If the VMSINSTAL software detects a system environment that may impede installation, you are asked if you want to continue with the installation. The VCS software installation does not require that DECnet be shut down or that interactive logins be disabled. If you are updating from VCS version 1.2, you do not have to shut it down for this installation. This procedure will shut down the current and restart with the new VCS software once the installation completes successfully.

If the VMSINSTAL software detects that DECnet is running or users are logged in, and displays the prompt:

```
* Do you want to continue anyway [NO]?
```

Answer **YES**.

4 VMSINSTAL asks:

```
* Are you satisfied with the backup of your system disk [YES]?
```

If a backup of the system disk is available that would enable a rebuild of the system disk in case of a drastic failure, answer **YES** and press Return.

5 VMSINSTAL asks:

```
Please mount the first volume of the set on device.
* Are you ready?
```

Load the distribution tape or cartridge labeled VCS013 on the specified load device. Answer **YES** and press Return when the device is ready for installation. VMSINSTAL responds:

```
%MOUNT-I-MOUNTED, VCS mounted on device
```

6 VMSINSTAL begins the installation and displays a message similar to the following:

```
The following products will be processed:
  VCS V1.3
        Beginning installation of VCS V1.3 at 12:04
```

7 VMSINSTAL restores the first save set and moves the release notes to directory SYS$HELP.

```
%VMSINSTAL-I-RESTORE, Restoring product save set A ...
%VMSINSTAL-I-RELMOVED, The product's release notes have been
successfully moved to SYS$HELP.
```

8 VMSINSTAL asks:

```
* Do you want to purge files replaced by this installation [YES]?
```

If the installation is an update of VCS from version 1.2 to 1.3, and you want to purge the older generations of the product files, answer **YES** and press Return.

9 VMSINSTAL asks:

```
* Do you want to run the IVP after the installation [YES]?
```

If you want to execute the installation verification procedure, answer **YES** and press Return.

10 VMSINSTAL reminds you, with the following message, that the installation verification procedure can also be run afterward:

```
The VCS Installation Verification Procedure can also be executed
manually after the installation by using the command:

        $ @SYS$TEST:VCS$IVP.COM
```

11 VMSINSTAL asks:

```
Product license information

Product:      VAXCLUSTER-CONSOLE
Producer:     DEC
Version:      1.3
Release Date: 11-APR-1990

* Does this product have an authorization key registered and loaded?
```

The product authorization key must be registered and loaded before you can activate the VCS software. If you have done so, answer **YES** and press Return. Otherwise, VMSINSTAL prompts you to do so:

```
**********************    W A R N I N G    **********************

At the completion of the VCS software installation, you must use
the following command:

        $ @SYS$UPDATE:VMSLICENSE

to register  and  load  the VCS product authorization key before
starting the software.
```

12 VMSINSTAL verifies that the system disk contains a minimum of 7000 free blocks for the installation of the product. If not, VMSINSTAL notifies you and terminates the installation procedure with the following message:

```
%VMSINSTAL-E-NOSPACE, VCS requires 7000 blocks for the installation
```

13 If sufficient disk space is found, VMSINSTAL restores the second save set.

```
%VMSINSTAL-I-RESTORE, Restoring product save set B ...
```

14 VMSINSTAL asks:

```
In addition  to a set of default icons, VCS allows you to design
your  own  icons  representing  various  serviced  resources. To
extend  this  collection  of  default  icons, you need to install
their icon bitmap DDIF source files.

* Do you want to install the default icon bitmaps [YES]?
```

The VCS icon conversion tool uses these files in conjunction with the newly created icon bitmap DDIF source files to produce a new set of icons used by the VCS Configuration Editor and the Central Control Coordinator Interface. These icon bitmap DDIF source files are restored to the directory VCS$ICONS: and take up approximately 106 disk blocks. If you want to install these files, answer **YES** and press Return.

15 VMSINSTAL notifies you that the following product specific directories are to be created:

```
The following directories are created to contain VCS files:

        SYS$SPECIFIC:[VCS]
        SYS$SPECIFIC:[VCS.ENS]
        SYS$SPECIFIC:[VCS.LOG]
        SYS$SPECIFIC:[SYSHLP.EXAMPLES.VCS]
        SYS$SPECIFIC:[SYSHLP.EXAMPLES.VCS.ICONS]
        SYS$SPECIFIC:[SYSTEST.VCS$IVP]
```

16 VMSINSTAL begins the next phase of the installation by moving the installed files to their target directories and displaying the following message:

```
All requested VCS V1.3-000 save sets are restored.

%VMSINSTAL-I-MOVEFILES, Files will now be moved to their target
directories...
```

17 VMSINSTAL activates the product startup procedure to install the image files:

```
VAXcluster Console System Startup Procedure
Install VCS images...
```

18 VMSINSTAL creates a template configuration data file and skips steps 19 to 22 if the installation is being performed as an original product installation:

```
A template configuration file is now created to contain only the
scan event records. The commands that are to be used to create
this template configuration file can be found in the
Configuration Editor indirect command file:

        VCS$EXAMPLES:VCS$CONFIGURATION_TEMPLATE.COM

You need to use the Configuration Editor to create additional
configuration information describing the serviced nodes before
starting VCS. Use the following command to do so:

        $ VCS EDIT CONFIGURATION
```

19 VMSINSTAL indicates that conversion of data is to be performed if updating from VCS version 1.2,

```
The VCS 1.2 configuration and scan files require conversion to
version 1.3 format. These files along with the VCS security
information, defined in the system Rights List database, will be
consolidated into a single configuration file in binary format.

You must also convert other locally created scan files into the
new format. At the prompt, please list these files separated by
commas and use wild-card characters in the file names where
appropriate. Terminate with a carriage-return if there are no
other files to be converted.

* Other VCS scan files:
```

Enter a list of file names (use wild-card characters where appropriate) followed by Return.

20 The following VMSINSTAL message explains what happens before the actual conversion is carried out:

```
Before the conversion, a backup copy of the configuration file

          SYS$MANAGER:VCS$CONFIGURATION.DAT_012

is created for possible fall-back.

After a successful conversion, the VCS 1.2 locally created scan
files along with the Digital supplied ones will be deleted from
the system. The VCS 1.2 security information will also be
removed from the Rights List database.

* Press Return to begin the conversion
```

Enter Return to initiate the conversion process.

21 VMSINSTAL creates a backup copy of the older configuration file and begins the conversion:

```
Please wait, it will take approximately 5 minutes to convert the
following files:

Directory SYS$SYSROOT:[SYSMGR]

VCS$SCAN_EVENTS.DAT;1                    3  14-FEB-1989 09:12:33.39
VCS$SCAN_HSC50.DAT;1                     5  14-FEB-1989 09:12:34.51
VCS$SCAN_HSC70.DAT;1                     7  14-FEB-1989 09:12:35.15
VCS$SCAN_KL10.DAT;1                      3  14-FEB-1989 09:12:35.70
VCS$SCAN_KS10.DAT;1                      3  14-FEB-1989 09:12:36.01
VCS$SCAN_LANBRIDGE.DAT;1                 3  14-FEB-1989 09:12:36.50
VCS$SCAN_LPS40.DAT;1                     8  14-FEB-1989 09:12:37.29
VCS$SCAN_MICROVAX2000.DAT;1              2  14-FEB-1989 09:12:37.80
VCS$SCAN_MICROVAX3000.DAT;1              2  14-FEB-1989 09:12:38.12
VCS$SCAN_MICROVAXII.DAT;1                3  14-FEB-1989 09:12:38.38
VCS$SCAN_RSTSV9.DAT;1                    5  14-FEB-1989 09:12:39.23
VCS$SCAN_TOPS10.DAT;1                    3  14-FEB-1989 09:12:39.77
VCS$SCAN_TOPS20.DAT;1                    4  14-FEB-1989 09:12:40.05
VCS$SCAN_UNIX.DAT;1                     25  14-FEB-1989 09:12:40.57
VCS$SCAN_VAX6200.DAT;1                   2  14-FEB-1989 09:12:41.05
VCS$SCAN_VAX750.DAT;1                    3  14-FEB-1989 09:12:41.31
VCS$SCAN_VAX780.DAT;1                    3  14-FEB-1989 09:12:42.04
VCS$SCAN_VAX8200.DAT;1                   2  14-FEB-1989 09:12:42.29
VCS$SCAN_VAX8300.DAT;1                   2  14-FEB-1989 09:12:42.52
VCS$SCAN_VAX8500.DAT;1                   6  14-FEB-1989 09:12:42.77
VCS$SCAN_VAX8600.DAT;1                   7  14-FEB-1989 09:12:43.32
VCS$SCAN_VAX8700.DAT;1                   6  14-FEB-1989 09:12:43.59
VCS$SCAN_VAX8800.DAT;1                   6  14-FEB-1989 09:12:43.82
VCS$SCAN_VITALINK.DAT;1                  3  14-FEB-1989 09:12:44.44
VCS$SCAN_VMSV4.DAT;1                     6  14-FEB-1989 09:12:45.10
VCS$SCAN_VMSV5.DAT;1                     6  14-FEB-1989 09:12:45.38
```

22 The following VMSINSTAL message is displayed at completion:

```
All specified files are converted successfully. Deleting the
obsolete scan files.
```

23 VMSINSTAL creates the template ENS data file:

```
The default event notification system data file is now created
to contain a number of pre-defined actions and events. The
commands that are to be used to create this data file can be
found in the event notification system editor command file:

        VCS$EXAMPLES:VCS$ENS_TEMPLATE.COM

You need to use the event notification system editor to create
additional actions and events. Use the following command to do
so:

        $ RUN SYS$SYSTEM:VCS$ENS_EDITOR
```

24 VMSINSTAL prompts you to issue the following commands, if not already done:

```
Insert the following command into SYS$STARTUP:SYSTARTUP_V5.COM:

        $ @SYS$STARTUP:VCS$STARTUP SYSTEM
```

and

```
Insert the following command into SYS$MANAGER:SYSHUTDWN.COM:

        $ VCS SHUTDOWN
```

25 VMSINSTAL verifies the SYSGEN parameters SCSNODE and SCSSYSTEMID and displays the following prompt:

```
You must define the SYSGEN parameters SCSNODE and SCSSYSTEMID
for the VCS host system. The VCS Central Control Coordinator
Interface makes use of this information in the creation of
subprocesses. Define these parameters as follows:

        SCSNODE = quoted-node-name
        SCSSYSTEMID = (1024 * DECnet-node-area) + DECnet-node-number

Thus, for node PETER whose DECnet node number is 1.484, its
definitions of these parameters are:

        SCSNODE = "PETER"
        SCSSYSTEMID = 1508 ! (1024 * 1) + 484
```

26 The following VMSINSTAL message reminds you of the option to remove the product from the system if you want to:

```
To deinstall the VCS product, execute the following command:

        $ @SYS$MANAGER:VCS$DEINSTAL.COM
```

27 If you chose to perform the installation verification procedure earlier, VMSINSTAL performs the procedure at this time and displays the following:

```
*****************************************************************
*          VCS 1.3 Installation Verification Procedure          *
*****************************************************************

Begin...
Complete!
```

28 The product installation procedure is complete. VMSINSTAL displays a message similar to the following:

```
Installation of VCS V1.3 completed at 12:12

VMSINSTAL procedure done at 12:13
```

2.4.3 VCS Installation Log

This section consists of the following sample log of a VCS software installation:

```
$ @SYS$UPDATE:VMSINSTAL VCS013 MUA0: Return

                VAX/VMS Software Product Installation Procedure V5.3

It is 14-MAR-1990 at 11:58.

Enter a question mark (?) at any time for help.

%VMSINSTAL-W-ACTIVE, The following processes are still active:
        USER
        DECW$WM_1
        DECW$WM_2
        DECW$TE_1
* Do you want to continue anyway [NO]? YES Return
* Are you satisfied with the backup of your system disk [YES]? YES Return
Please mount the first volume of the set on  MUA0:.
* Are you ready?  YES Return
%MOUNT-I-MOUNTED, VCS mounted on _MISVCS$MUA0:
The following products will be processed:

  VCS V1.3

        Beginning installation of VCS V1.3 at 12:04

%VMSINSTAL-I-RESTORE, Restoring product save set A ...
%VMSINSTAL-I-RELMOVED, The product's release notes have been successfully
moved to SYS$HELP.
* Do you want to purge files replaced by this installation [YES]? Return
* Do you want to run the IVP after the installation [YES]? Return

        The VCS Installation Verification Procedure can also be executed
        manually after the installation by using the command:

                $ @SYS$TEST:VCS$IVP.COM

        Product license information

        Product:      VAXCLUSTER-CONSOLE
        Producer:     DEC
        Version:      1.3
        Release Date: 11-APR-1990

* Does this product have an authorization key registered and loaded?  yes Return
%VMSINSTAL-I-RESTORE, Restoring product save set B ...

        In addition  to a set of default icons, VCS allows you to design
        your  own  icons  representing  various  serviced  resources. To
        extend  this  collection  of  default icons, you need to install
        their icon bitmap DDIF source files.

* Do you want to install the default icon bitmaps [YES]? Return
%VMSINSTAL-I-RESTORE, Restoring product save set C ...
```

```
        The following directories are created to contain VCS files:

                SYS$SPECIFIC:[VCS]
                SYS$SPECIFIC:[VCS.ENS]
                SYS$SPECIFIC:[VCS.LOG]
                SYS$SPECIFIC:[SYSHLP.EXAMPLES.VCS]
                SYS$SPECIFIC:[SYSHLP.EXAMPLES.VCS.ICONS]
                SYS$SPECIFIC:[SYSTEST.VCS$IVP]

%VMSINSTAL-I-SYSDIR, This product creates system directory [VCS.ENS].

    If you intend to execute this layered product on other nodes in your
    VAXcluster, and you have the appropriate software license, you must
    prepare the system-specific roots on the other nodes by issuing the
    following command on each node (using a suitably privileged account):

$ CREATE /DIRECTORY SYS$SPECIFIC:[VCS.ENS]/OWNER_UIC=[1,4]
/PROTECTION=(S:RWED,O:RWED,G:RE,W)
%VMSINSTAL-I-SYSDIR, This product creates system directory [VCS.LOG].

    If you intend to execute this layered product on other nodes in your
    VAXcluster, and you have the appropriate software license, you must
    prepare the system-specific roots on the other nodes by issuing the
    following command on each node (using a suitably privileged account):

$ CREATE /DIRECTORY SYS$SPECIFIC:[VCS.LOG]/OWNER_UIC=[1,4]
/PROTECTION=(S:RWED,O:RWED,G:RE,W)
%VMSINSTAL-I-SYSDIR, This product creates system directory
[SYSHLP.EXAMPLES.VCS].

    If you intend to execute this layered product on other nodes in your
    VAXcluster, and you have the appropriate software license, you must
    prepare the system-specific roots on the other nodes by issuing the
    following command on each node (using a suitably privileged account):

$ CREATE /DIRECTORY SYS$SPECIFIC:[SYSHLP.EXAMPLES.VCS]
/OWNER_UIC=[1,4]/PROTECTION=(S:RWED,O:RWED,G:RE,W)
%VMSINSTAL-I-SYSDIR, This product creates system directory
[SYSHLP.EXAMPLES.VCS.ICONS].

    If you intend to execute this layered product on other nodes in your
    VAXcluster, and you have the appropriate software license, you must
    prepare the system-specific roots on the other nodes by issuing the
    following command on each node (using a suitably privileged account):

$ CREATE /DIRECTORY SYS$SPECIFIC:[SYSHLP.EXAMPLES.VCS.ICONS]
/OWNER_UIC=[1,4]/PROTECTION=(S:RWED,O:RWED,G:RE,W)
%VMSINSTAL-I-SYSDIR, This product creates system directory
[SYSTEST.VCS$IVP].

    If you intend to execute this layered product on other nodes in your
    VAXcluster, and you have the appropriate software license, you must
    prepare the system-specific roots on the other nodes by issuing the
    following command on each node (using a suitably privileged account):

$ CREATE /DIRECTORY SYS$SPECIFIC:[SYSTEST.VCS$IVP]/OWNER_UIC=[1,4]
/PROTECTION=(S:RWED,O:RWED,G:RE,W)

        All requested VCS V1.3-000 save sets are restored.
```

```
%VMSINSTAL-I-MOVEFILES, Files will now be moved to their target
directories...

VAXcluster Console System Startup Procedure
Install VCS images...

        ****************************************************************
        *          VCS 1.3 Installation Verification Procedure         *
        ****************************************************************

        Begin...
        Complete!
        Installation of VCS V1.3 completed at 12:12

        VMSINSTAL procedure done at 12:13

$
```

2.5 Site-Specific Modifications to the Installed VCS Environment

This section describes the site-specific modifications that must be performed after the VCS software has been installed on the VCS host system but before the software can be started. Some of these are modifications that must be made to the VCS software site-specific startup procedure SYS$MANAGER:VCS$SITE_SPECIFIC.COM. If present in the SYS$MANAGER directory, the SYS$MANAGER:VCS$SITE_SPECIFIC.COM is automatically invoked by the VCS software startup procedure SYS$STARTUP:VCS$STARTUP.COM before the VCS software processes are started.

2.5.1 Creating a Configuration File

Use the Configuration Editor to create the VCS Configuration File SYS$MANAGER:VCS$CONFIGURATION.DAT before starting the VCS software. This file describes all of the information necessary for the VCS software to manage and service the nodes in the configuration. Refer to *VAXcluster Console System Software Manual* for information about what to include in a Configuration File and how to use the Configuration Editor. If you are planning to use host initiated connections, create the LTA devices before running the Configuration Editor. See Section 2.2.

2.5.2 Console Line Communications Characteristics

The default character format for all terminal lines connected to the VCS host system is /NOEIGHTBIT, and is defined by the SYSGEN parameter TTY_DEFCHAR. The VCS software makes use of this terminal characteristic as defined in TTY_DEFCHAR. If the system manager leaves the default value to be /NOEIGHTBIT, all console lines managed by the VCS software on the host system inherit that characteristic.

If installing the VCS software to control a system that requires the character format of its console port to be eight-bit, include the following command in the VCS software site-specific startup SYS$MANAGER:VCS$SITE_SPECIFIC.COM procedure:

```
$ SET TERMINAL device /PERMANENT /EIGHTBIT Return
```

In this command, *device* is the terminal port on the VCS host system that is configured for the serviced system requiring eight-bit character format.

The default setting for all terminal lines on the VCS host system is /NOPARITY. If you are installing the VCS software to control a system that requires a parity console line, include the following command in the VCS software site-specific startup procedure SYS$MANAGER:VCS$SITE_SPECIFIC.COM:

```
$ SET TERMINAL device /PERMANENT /PARITY Return
```

2.5.3 VCS Logical Names

The VCS software defines and accepts user-defined logical names. This section describes these logical names and their uses.

2.5.3.1 Node Name Grouping by Logical Name Some VCS software commands can operate on one or more nodes while others can operate on single nodes only. The node names recognized by the VCS software are those names listed in the VCS Configuration File.

Any VCS software command that accepts a single node name can also accept a logical name for each node name. Do not use VCS as a logical name. The VCS REVIEW command does not work as expected if VCS is used as a logical name. For example, type the following:

```
$ DEFINE NODE1 PEPPER Return
```

The following two commands are synonymous and enable connection to the same system:

```
$ VCS CONNECT NODE1 Return
$ VCS CONNECT PEPPER Return
```

Any VCS software command that accepts a list of node names also accepts a list of logical names for each node name. One logical name can be used with one node name, several node names, or any combination thereof. For example, assign the following logical names as node names:

```
$ DEFINE NODE1 PEPPER Return
$ DEFINE NODE2 HEART Return
$ DEFINE NODE3 HSC001 Return
$ DEFINE NODE4 HSC002 Return
$ DEFINE VAX NODE1,NODE2 Return
$ DEFINE HSC NODE3,NODE4 Return
$ DEFINE ALL VAX,HSC Return
```

The following commands are synonymous and can be used to monitor the same four systems — PEPPER, HEART, HSC001, and HSC002:

```
$ VCS MONITOR PEPPER,HEART,HSC001,HSC002 [Return]
$ VCS MONITOR NODE1,NODE2,NODE3,NODE4 [Return]
$ VCS MONITOR VAX,HSC [Return]
$ VCS MONITOR VAX,HSC001,HSC002 [Return]
$ VCS MONITOR ALL [Return]
```

Note that node names can be abbreviated; logical names cannot. The default node name used by the commands VCS ACCESS, VCS COORDINATE, VCS MONITOR, VCS RECORD, and VCS REVIEW is VCS$ALL_NODES, a system-wide logical name that specifies all the nodes in the current VCS software configuration. For more information about these commands, see the *VAXcluster Console System Software Manual.*

The logical names can be defined in any logical name table accessible to the user process. To make logical names available on a system-wide basis, define these logical names at system startup by including the DEFINE/SYSTEM/EXECUTIVE commands in The VCS software site-specific startup procedure. For example, include the commands, that were listed previously in this section:

```
$ DEFINE/SYSTEM/EXECUTIVE NODE1 PEPPER
$ DEFINE/SYSTEM/EXECUTIVE NODE2 HEART
$ DEFINE/SYSTEM/EXECUTIVE NODE3 HSC001
$ DEFINE/SYSTEM/EXECUTIVE NODE4 HSC002
$ DEFINE/SYSTEM/EXECUTIVE VAX NODE1,NODE2
$ DEFINE/SYSTEM/EXECUTIVE HSC NODE3,NODE4
$ DEFINE/SYSTEM/EXECUTIVE ALL VAX,HSC
```

2.5.3.2 VCS Logical Name Definitions The following system-wide logical names are defined by VCS. Their definitions determine the behavior of the various VCS software components. You may re-define some of these logical names in the site-specific procedure SYS$MANAGER:VCS$SITE_SPECIFIC.COM to tailor your local environment.

Table 2–1 Logical Names

VCS$†	The top level directory of the VCS related subdirectories containing various data and log files.
VCS$ALL_NODES†	The list of all nodes that are currently in the VCS configuration.
VCS$CONFIGURATION†	The VCS configuration file name that is currently active.

†These logical names are defined by the VCS software components and should not be redefined or the product may behave incorrectly.

(continued on next page)

Table 2–1 (Cont.) Logical Names

VCS$DISPLAY†	The list of all DECwindows display servers where the C3 Interface is started up automatically when VCS is activated.
VCS$ENS	The directory which contains the ENS data, command, and executable image files.
VCS$ENS_DATA_FILE†	The ENS data file name that is currently active.
VCS$ENS_LOG	The directory which contains the ENS process output and error log files.
VCS$EVENT_LOG_ALLOCATION	The initial file allocation quantity in blocks for the VCS event log file. This logical name defines the default value of the FAB$L_ALQ field in the RMS FAB data structure when the VCS event log file is first created.
VCS$EVENT_LOG_EXTENSION	The default extension quantity in blocks for the VCS event log file. This logical name defines the default value of the FAB$L_DEQ field in the RMS FAB data structure when the VCS event log file is first created. Note that a larger extension quantity will help ensure a contiguous file. A contiguous file helps improve the speed of the REVIEW commands. Consider the VCS$EVENT_LOG_EXTENSION when deciding on the values for the allocation and extension quantities.
VCS$EXAMPLES†	The directory which contains the VCS sample source codes and other example files.
VCS$GROUP_*cluster-name*†	The list of all nodes that were defined to belong to the Cluster *cluster-name* in the VCS configuration file. *Cluster-name* can be used in any command that requires a list of nodes.
VCS$ICONS	The directory which contains the DIGITAL supplied icon image DDIF files.
VCS$LOG†	The directory where the console and event log files are created and maintained by the VCS software.
VCS$LOG_ALLOCATION	The initial file allocation quantity in blocks for the VCS console log file. This logical name defines the default value of the FAB$L_ALQ field in the RMS FAB data structure when the VCS console log file is first created.

†These logical names are defined by the VCS software components and should not be redefined or the product may behave incorrectly.

(continued on next page)

Table 2–1 (Cont.) Logical Names

VCS$LOG_EXTENSION	The default extension quantity in blocks for the VCS console log file. This logical name defines the default value of the FAB$L_DEQ field in the RMS FAB data structure when the VCS console log file is first created. Note that a larger extension quantity will help ensure a contiguous file. A contiguous file helps to improve the speed of the REVIEW commands. Consider this when deciding on the values for the allocation and extension quantities.
VCS$MAILBOX†	The inter-process communication mailbox device.
VCS$PRIVATE	A unique identifier which is used by the VCS software to construct various inter-process communication facility names and devices when two or more nodes are running the VCS software in a VAXcluster environment.
VCS$PROCESS_C3	If TRUE, the Central Control Coordinator process is started in the VCS startup sequence. The default is TRUE.
VCS$PROCESS_ELOG	If TRUE, the VCS Event Logger process VCS$ELOG is started in the VCS startup sequence. The default is TRUE.
VCS$PROCESS_ENS	If TRUE, the VCS Event Notification System processes are started in the VCS startup sequence. The default is TRUE.
VCS$PROCESS_SCANNER	If TRUE, the Data Scanner process VCS$SCANNER is started in the VCS startup sequence. The default is TRUE.
VCS$STANDBY	If TRUE, the VCS software will operate in a fail-over mode on an appropriately set up platform configuration.
VCS$TERMINAL_DEFAULT	The file name containing the customized features for the DECterm windows created by the C3 Interface.

†These logical names are defined by the VCS software components and should not be redefined or the product may behave incorrectly.

2.5.4 Setting Console Terminal Characteristics

Specific parameters must be set for all lines that connect to the VCS host system. Execute the following command for each VAX system startup procedure for each serviced node:

```
$ SET TERMINAL OPA0: /PERMANENT /FULLDUP /HOSTSYNC /TTSYNC Return
```

Check the console line speed setting at each node to ensure that the console line speed matches the VCS host system terminal port speed.

If you are installing the VCS software to service a system without VMS, make sure that the system console software provides the same set of characteristics for the console terminal line. The equivalent console terminal characteristics are:

/FULLDUP	Indicates the mode of operation is full-duplex.
/HOSTSYNC	Enables a system without VMS to control the flow of data from the VCS software. With this characteristic, the system can stop transmission from the VCS software by generating an XOFF when the input buffer is full. When the system's input buffer is empty, generating an XON resumes transmission by the VCS software.
/TTSYNC	Enables the system to respond to the flow control requests from the VCS software. With this characteristic the system can stop transmission to the VCS software when an XOFF is received. Transmission from the VCS software resumes when an XON is received.

2.5.5 Starting the VCS Software at System Reboot

Add the following command to the SYS$STARTUP:SYSTARTUP_V5.COM to start the VCS software during system reboot:

```
$ @SYS$STARTUP:VCS$STARTUP.COM SYSTEM Return
```

See Section 2.5.5.1 for the description of VCS$STARTUP.COM.

Do not submit the VCS software startup command procedure VCS$STARTUP.COM in batch mode. The VCS software must allocate the terminal lines in SYSTARTUP_V5.COM before any other process. The following scenario can occur if another process allocates the terminal lines in STARTUP_V5.COM before the VCS software. Noise on an unallocated line can be mistaken for a login request and result in the LOGINOUT process prompting for a user name. This action normally causes a timeout at a terminal. However, a processor at each end of the terminal line can cause an infinite and alternating execution of the VCS host system and serviced system's LOGINOUT process, as shown in the following example:

```
Username:
Password:
    .
    .
    .
```

If not using host initiated connection devices, start the VCS software at any point within the SYS$STARTUP:SYSTARTUP_V5.COM command procedure. If using host initiated connection devices, must create the LTA devices before starting the VCS software. Use the command procedure SYS$MANAGER:VCS$LTA.COM to create the LTA devices. The LTA devices require the LAT software and can only be created after DECnet software is started. Thus, the order of product startup is as follows:

1 DECnet

2 LAT

3 VCS

The following sample commands show how the components are started in SYS$STARTUP:SYSTARTUP_V5.COM:

```
    .
    .
    .
$ IF F$SEARCH("SYS$SYSTEM:NETACP.EXE") .NES. "" -
  THEN @SYS$MANAGER:STARTNET
$ @SYS$MANAGER:VCS$LTA 1-8 LAT40 1-8 54
$ @SYS$STARTUP:VCS$STARTUP SYSTEM
    .
    .
    .
```

2.5.5.1 VCS$STARTUP.COM The SYS$STARTUP:VCS$STARTUP.COM enables the VCS system manager to start and control detached VCS software processes. This procedure also establishes the environment in which the VCS software operates in.

The procedure has the following parameters:

$ @SYS$STARTUP:VCS$STARTUP.COM *option priority device*

where:

option is one of the following options:

INSTALL	indicates that the VCS software images are installed. This option does not start the VCS software.
SYSTEM	indicates that the VCS software images are installed and then the complete the VCS software startup sequence are performed. This option must be specified in the system startup procedure SYS$STARTUP:SYSTARTUP_V5.COM.

or process names:

VCS$ELOG	indicates that only the Event Logger process is started.
VCS$ENS	indicates that only the ENS processes are started.
VCS$IODL	indicates that only the I/O Data Logger process is started.
VCS$C3	indicates that only the Central Control Coordinator process are started.
VCS$RECORDER	indicates that a process is started. Multiple Interface processes may be run, each directing console data to a different output terminal device.
VCS$SCANNER	indicates that only the Data Scanner process is started.

If *option* is omitted, that is, specified as " ", the complete VCS software startup sequence begins. This is the recommended option when starting the VCS software interactively.

priority represents the VCS software process priority. By default, all the VCS software processes inherit the current priority of the process that executes VCS$STARTUP.COM. If specifying a priority with the SYSTEM option, all VCS software processes inherit that value as their process base priority.

device If *option* is VCS$RECORDER, *device* represents the VCS Record Interface terminal output device name. If *option* is VCS$C3, *device* is optional and represents the DECwindows graphics server display. If *device* is specified, the C3 Interface is started only on that DECwindows display.

2.5.5.2 VCS Startup Sequence The complete VCS software startup sequence, executed by VCS$STARTUP.COM, is described in the following steps:

1 Define the specific logical names (for example, VCS$EXAMPLES).

2 Execute the site-specific procedure SYS$MANAGER:VCS$SITE_SPECIFIC.COM to set up the site requirements, if present.

3 Shut down the VCS software, if currently running.

4 Install the VCS software images, if required.

5 The I/O Data Logger process, VCS$IODL, begins. Error messages are written to the file SYS$MANAGER:VCS$IODL_OUTPUT.LOG.

6 The Data Scanner process, VCS$SCANNER, begins. Error messages are written to the file SYS$MANAGER:VCS$SCANNER_OUTPUT.LOG.

Define the VCS logical name VCS$PROCESS_SCANNER to be FALSE in the SYS$MANAGER:VCS$SITE_SPECIFIC.COM procedure to inhibit the Data Scanner process from being started in the sequence,

7 The Event Logger process, VCS$ELOG, begins. Error messages are written to the file SYS$MANAGER:VCS$ELOG_OUTPUT.LOG.

Define the VCS logical name VCS$PROCESS_ELOG to be FALSE in the SYS$MANAGER:VCS$SITE_SPECIFIC.COM procedure to inhibit the Event Logger process from being started in the sequence.

8 The ENS processes are started. Error messages are written to the file SYS$MANAGER:VCS$ENS_OUTPUT.LOG.

To inhibit the ENS processes from being started in the sequence, define the VCS logical name VCS$PROCESS_ENS to be FALSE in the SYS$MANAGER:VCS$SITE_SPECIFIC.COM procedure.

9 The VCS software starts the Central Control Coordinator Interface process, VCS$C3_*display* If the VCS host system is a VAXstation or a display destination has been defined in the configuration file. Error messages are written to the file SYS$MANAGER:VCS$C3_*display*_OUTPUT.LOG.

Define the VCS logical name, VCS$PROCESS_C3 to be FALSE in the SYS$MANAGER:VCS$SITE_SPECIFIC.COM procedure to inhibit the Central Control Coordinator Interface processes from being started in the sequence.

10 If the parameter *device* is specified or the logical name VCS$RECORDER_TERMINAL is defined to point to an output terminal. The VCS software starts the Recorder Interface process VCS$REC_*device* and writes error messages to the file SYS$MANAGER:VCS$REC_*device*_OUTPUT.LOG.

2.5.6 Stopping the VCS Software at System Shutdown

Add the following command to SYS$MANAGER:SYSHUTDWN.COM to terminate communications between the VCS host system and the serviced systems:

```
$ VCS SHUTDOWN
```

Remember to execute the site-specific shutdown procedure when shutting down the VCS host system.

2.6 Starting the VCS Software

The VCS software can now be started for the first time. The two ways to start the VCS software are:

- Reboot the system and automatically start the VCS software at system startup.
- Manually start up the VCS software.

If the SYSGEN parameters have been adjusted, as described in Section 2.2.4 or Section 2.5.2, run the AUTOGEN procedure by entering the command:

```
$ @SYS$UPDATE:AUTOGEN SAVPARAMS REBOOT Return
```

This command automatically generates the new SYSGEN parameters. AUTOGEN automatically reboots the VCS host system. When the system is rebooted, the VCS software is started as a part of the system startup procedure. When the VCS host system completes the system startup, log into the system manager's account, SYSTEM in Section 2.7.

To start up the VCS software manually, enter the following command:

```
$ @SYS$STARTUP:VCS$STARTUP.COM SYSTEM Return
```

2.7 Final Setup

Although the VCS software is operational, additional procedures must be performed before the installation is complete.

2.7.1 VAX 8500/8700/8800

Note *Read the information in this section only if installing the VCS software to manage a VAX 8530, 8550, 8700, or 8800 system.*

For each of these VAX systems, perform the following procedures at the VCS host system:

Note *The following steps are valid only for the VAXconsole PRO380 Console V9.3 Software.*

1 Enter the command:

```
$ VCS CONNECT node-name Return
```

where *node-name* is the name of a VAX 8500/8700/8800 series system. Any keystrokes entered are forwarded to the VAXconsole PRO380.

2 Press Return to confirm that the communication path between the VCS host system and the VAXconsole PRO380 has been established successfully. The >>> prompt is displayed.

3 Enter the following command to share the same OPA0 device with the VAXconsole local terminal:

```
>>> SET TERMINAL OPA0 Return
```

4 Enter the following command to enter the VAXconsole remote port into program I/O mode:

```
>>> SET TERMINAL PROGRAM Return
```

5 Press Ctrl/G to return to the VCS host system.

Now all of the console functions to control the VAX 8500/8700/8800 series system from a VCS software user interface can be performed with the exception of the following commands. However, the following commands can be entered from the VAXconsole PRO380 terminal keyboard:

- EXIT
- POWER { OFF / ON / STANDBY }
- DISABLE PRINTER
- ENABLE REMOTE { CONSOLE / USER }

2.7.2 VAX 8830/8840

Note *Read the information in this section only if the VCS software has been installed to manage one or more VAX 8830/8840 series systems.*

For each of these VAX systems, perform the following steps at the VCS host system:

1 Enter the following command:

```
$ VCS CONNECT node-name Return
```

where *node-name* is the name of a VAX 8830/8840 series system. Any keystrokes entered are forwarded to the VAXconsole MicroVAX II.

2 Press Return to confirm that the communication path between the VCS host system and the VAXconsole MicroVAX II has been established successfully. The PS-HW-0> prompt is displayed.

3 Enter the following command to share the same OPA0 device with the VAXconsole local terminal:

```
PS-HW-0>  SET TERMINAL OPA0 Return
```

4 Enter the following command to enter the VAXconsole remote port into program I/O mode:

```
PS-HW-0>  SET TERMINAL PROGRAM Return
```

5 Press Ctrl/G to return to the VCS host system.

Now all of the console functions to control the VAX 8830/8840 series system from a VCS software user interface can be performed. However, enter the commands at the VAXconsole MicroVAX II terminal keyboard:

- EXIT
- POWER { INITIALIZE | OFF | ON | STANDBY | STATUS }

Index

A

AC power plug types, 1–13 (fig)

B

BA123 device connectors, 1–10 (fig), 1–28 (fig)
BA123 system, 1–9, 1–23, 1–27
BA213 device connectors, 1–11 (fig), 1–29 (fig)
BA213 enclosure bulkhead connection, 1–15 (fig), 1–31 (fig)
BA213 system, 1–9, 1–23, 1–27
BA23/BA123 enclosure bulkhead connection, 1–14 (fig), 1–30 (fig)
BA23 device connectors, 1–9 (fig), 1–27 (fig)
BA23 system, 1–9, 1–23, 1–27

C

Central terminal line, 1–5
Console extension cable connections, 1–21 (fig)

D

DECconnect adapter troubleshooting, 1–34
DECconnect adapter and cable connections, 1–31 (fig), 1–34 (fig)
DECconnect cable, 1–23
DECconnect cable and adapters, 1–26 (fig)
DECconnect components, 1–26
  adapters, 1–26, 1–31, 1–33
  cables, 1–26, 1–31, 1–33
  installation at serviced nodes, 1–33
DECserver 200 back panel, 2–4 (fig)
DECserver 200 connections, 1–18 (fig), 1–33 (fig)
DECserver 200 terminal server, 1–7, 1–17, 1–17 (fig), 1–32, 1–32 (fig)
  port setup, 2–4
Direct connection, 1–1
  DECconnect installation, 1–30
  fiberoptic installation, 1–12

F

Fiberoptic cable, 1–20
  characteristics, 1–7
  environmental requirements, 1–8
  with DECconnect Components, 1–23
Fiberoptic cable structure, 1–8 (fig)
Fiberoptic components, 1–7
  installation at serviced nodes, 1–19
Fiberoptic connector jacks, 1–20, 1–20 (fig)

Fiberoptic converter, 1–7, 1–14, 1–20
  kit components, 1–23
  troubleshooting, 1–25
Fiberoptic extension cable, 1–21
Final setup, 2–33

H

H7132 power supply, 1–7, 1–19
H7132 power supply connections, 1–19 (fig)
H7133 power supply, 1–7, 1–12, 1–17
H7133 power supply connections, 1–12 (fig), 1–16 (fig)
H8571-B adapter, 1–23
H8571-C adapter, 1–23
Hardware connection methods, 1–1
Hardware installation precautions, 1–5
  HSC precautions, 1–6
  VAX 8830/8840 precautions, 1–5
Host initiated connection, 1–3, 1–17
  DECconnect installation, 1–32
  setup, 2–3
  with DELNI, 1–3 (fig)
  with H4000, 1–4 (fig)
Host system preparation, 2–1
  DECconnect installation, 1–27
  fiberoptic installation, 1–8
  required disk space, 2–2
  required software, 2–2
  SYSGEN parameters, 2–3
  user terminals, 2–2
HSC storage controller, 1–19, 1–33
  see Hardware installation precautions

L

Logical names, 2–25 (tab)

O

Optional DECconnect cabling, 1–23 (fig)

P

Product authorization key, 2–1

S

Site-specific modifications
  configuration file creation, 2–23
  console line communications characteristics, 2–23
  console terminal characteristics settings, 2–28
  to the installed VCS environment, 2–23
  VCS logical names, 2–24
    definitions, 2–25
    Node name grouping, 2–24
  VCS software startup, 2–28
Software installation
  installation procedure, 2–14
  license registration, 2–13
  on host system, 2–13
  starting the VCS software, 2–32
  VAX 8500/8700/8800 preparation, 2–7
  VCS installation log, 2–21
Software kit inventory, 2–1
SYS$MANAGER:VCS$CONFIGURATION.DAT, 2–23
SYS$MANAGER:VCS$SITE_SPECIFIC.COM, 2–23
SYS$SYSTEM:MODPARAMS.DAT, 2–3
SYS$UPDATE:AUTOGEN.COM, 2–3
SYSGEN parameters, 2–3

V

VAX 8200, 1–21
VAX 8500/8700/8800
  final setup, 2–33
  remote port set, 2–8
VAX 8700/8800, 1–21
VAX 8830/8840, 1–19, 1–33
  see Hardware installation precautions
  final setup, 2–34
  remote port setup, 2–10
VAXconsole central terminal line, 1–6 (fig)

VAXconsole PRO380, 1–21
VAXconsole PRO380 COMM 1 port, 1–22 (fig)
VAXconsole PRO380 communication line setup menu, 2–9 (fig)
VCS$LTA.COM
  LTA device creation, 2–6
VCS$STARTUP.COM, 2–28, 2–29
VCS direct connection method, 1–2 (fig)
VCS disable switch, 1–24
VCS disable switch cabling, 1–24 (fig)
VCS software shutdown, 2–32
VCS startup sequence, 2–31
VMSINSTAL, 2–1

W

Work sheets, 2–11, 2–11 (fig), 2–12 (fig)